

FIG. 1

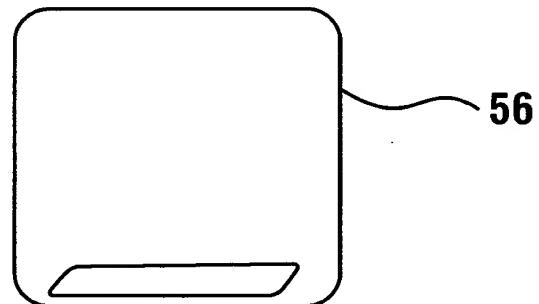
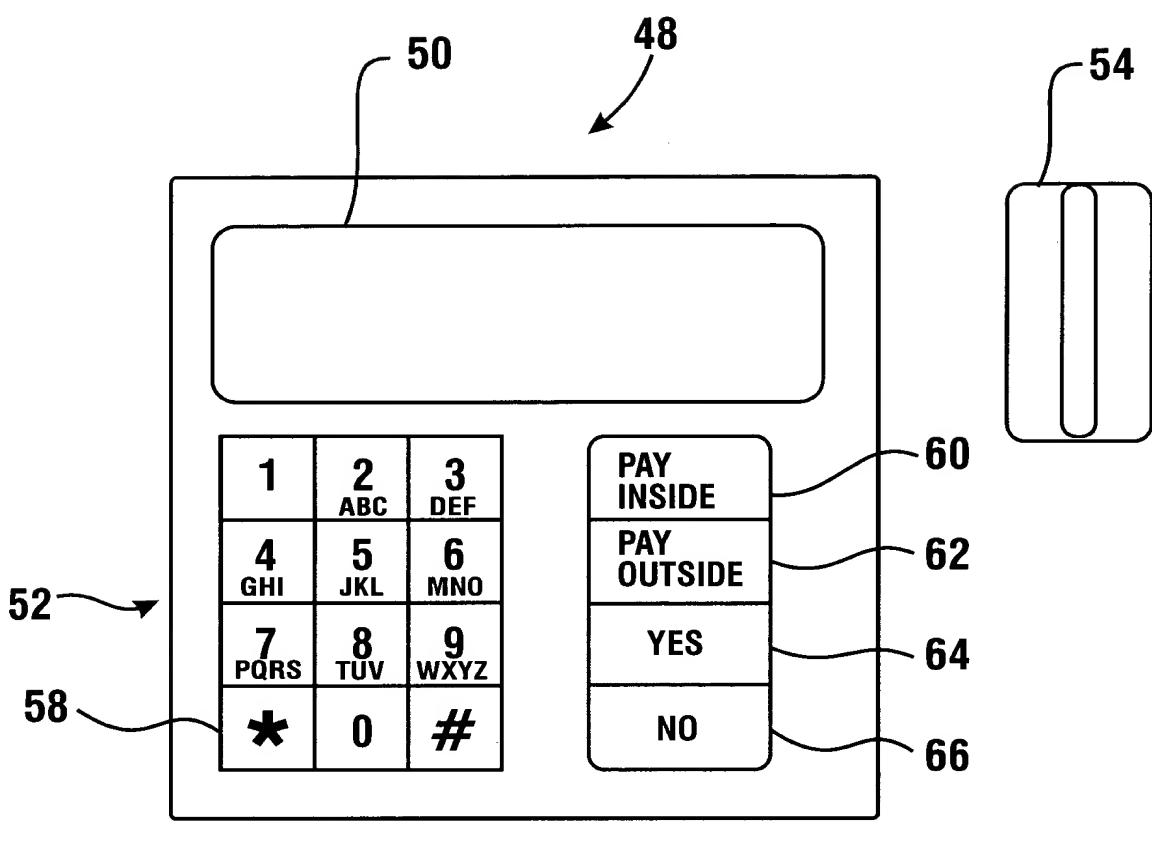


FIG. 2

FIG. 3

**SELECT
PAY INSIDE
OR PAY OUTSIDE**

68

ACTION
- SELECT "PAY INSIDE"

FIG. 4

**REMOVE NOZZLE
AND PUMP GAS**

70

ACTION
**- REMOVE NOZZLE
AND PUMP**

FIG. 5

**WOULD YOU
LIKE TO
HAVE SOME CASH?
IF SO PRESS "YES"**

72

ACTION
- NO RESPONSE
- REPLACE NOZZLE

FIG. 6

**PLEASE PAY
INSIDE**

74

ACTION
- USER PAYS INSIDE

FIG. 7

**SELECT
PAY INSIDE
OR PAY OUTSIDE**

76

ACTION

- USER SELECTS "PAY OUTSIDE"

FIG. 8

**PRESS
1 FOR CREDIT CARD
2 FOR DEBIT CARD
3 FOR STORED VALUE
CARD**

78

ACTION

- USER SELECTS INPUT
FOR EXAMPLE "1" FOR
CREDIT CARD

FIG. 9

**PLEASE INSERT
CREDIT CARD IN
CARD READER AND
WITHDRAW QUICKLY**

86

ACTION

- USER INSERTS CARD
AND WITHDRAWS CARD

FIG. 10

**REMOVE NOZZLE
AND PUMP GAS**

88

ACTION

- REMOVE NOZZLE AND PUMP

FIG. 11

WOULD YOU
LIKE TO
HAVE SOME CASH?
IF SO PRESS "YES"

98

ACTION

- NO RESPONSE
- REPLACE NOZZLE

FIG. 12

WOULD YOU LIKE
A RECEIPT ?
PRESS
"YES" OR "NO"

100

ACTION

- USER PRESSES SELECTED KEY
EXAMPLE "YES"

FIG. 13

RECEIPT IS NOW
PRINTING

102

ACTION

- PRINTER PRINTS RECEIPT

FIG. 14


THANK YOU
PLEASE TAKE RECEIPT

104

ACTION

- USER TAKES RECEIPT

FIG. 15

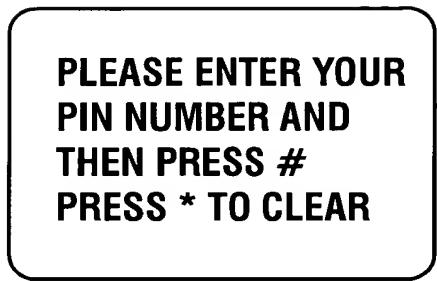


92

ACTION

- USER INPUTS PIN AND THEN #

FIG. 16

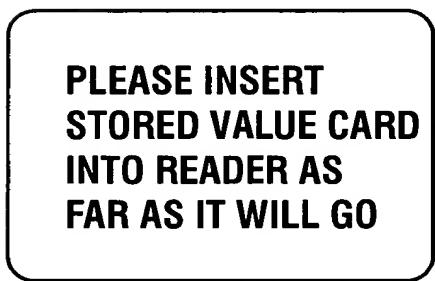


94

ACTION

- USER INSERTS STORED VALUE CARD

FIG. 17

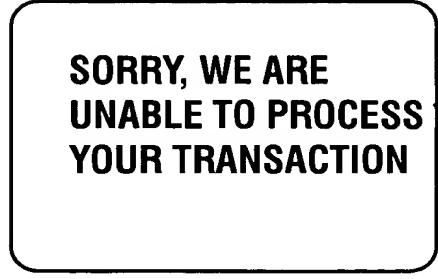

96

ACTION

- MACHINE RETURNS TO FIRST SCREEN AFTER TIME OUT

FIG. 18

PLEASE INPUT AMOUNT
BY PRESSING KEYS
THEN PRESS #
MAXIMUM \$100

106

ACTION

- USER INPUTS AMOUNT AND #

EXAMPLE \$100 INPUT

FIG. 19

\$100 FROM
CREDIT CARD
PRESS "YES" TO CONFIRM
"NO" TO INPUT NEW AMOUNT

108

ACTION

- CUSTOMER PRESSES APPROPRIATE BUTTON

EXAMPLE "YES"


FIG. 20



110


ACTION
- PRINTER PRINTS VOUCHER

FIG. 21

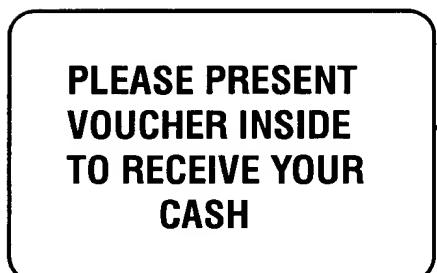

112 **ACTION**
- USER TAKES VOUCHER TO
CASH REGISTER / CASH DISPENSER
OR WINDOW AND RECEIVES CASH


FIG. 22

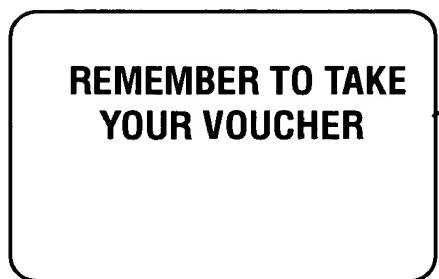

114

ACTION
- USER TAKES VOUCHER


FIG. 23

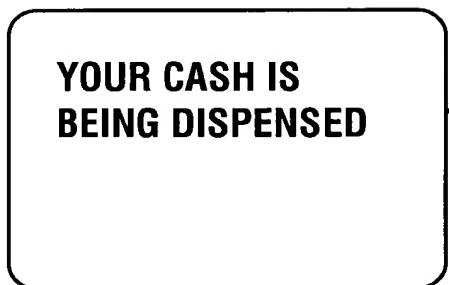

188

ACTION
- MACHINE DISPENSES CASH

FIG. 24

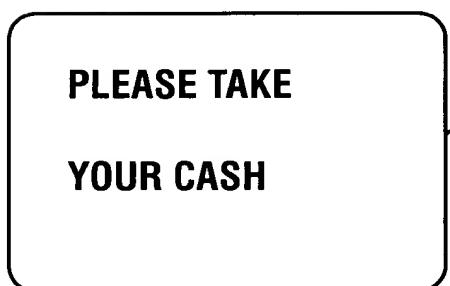

190

ACTION
- USER TAKES CASH

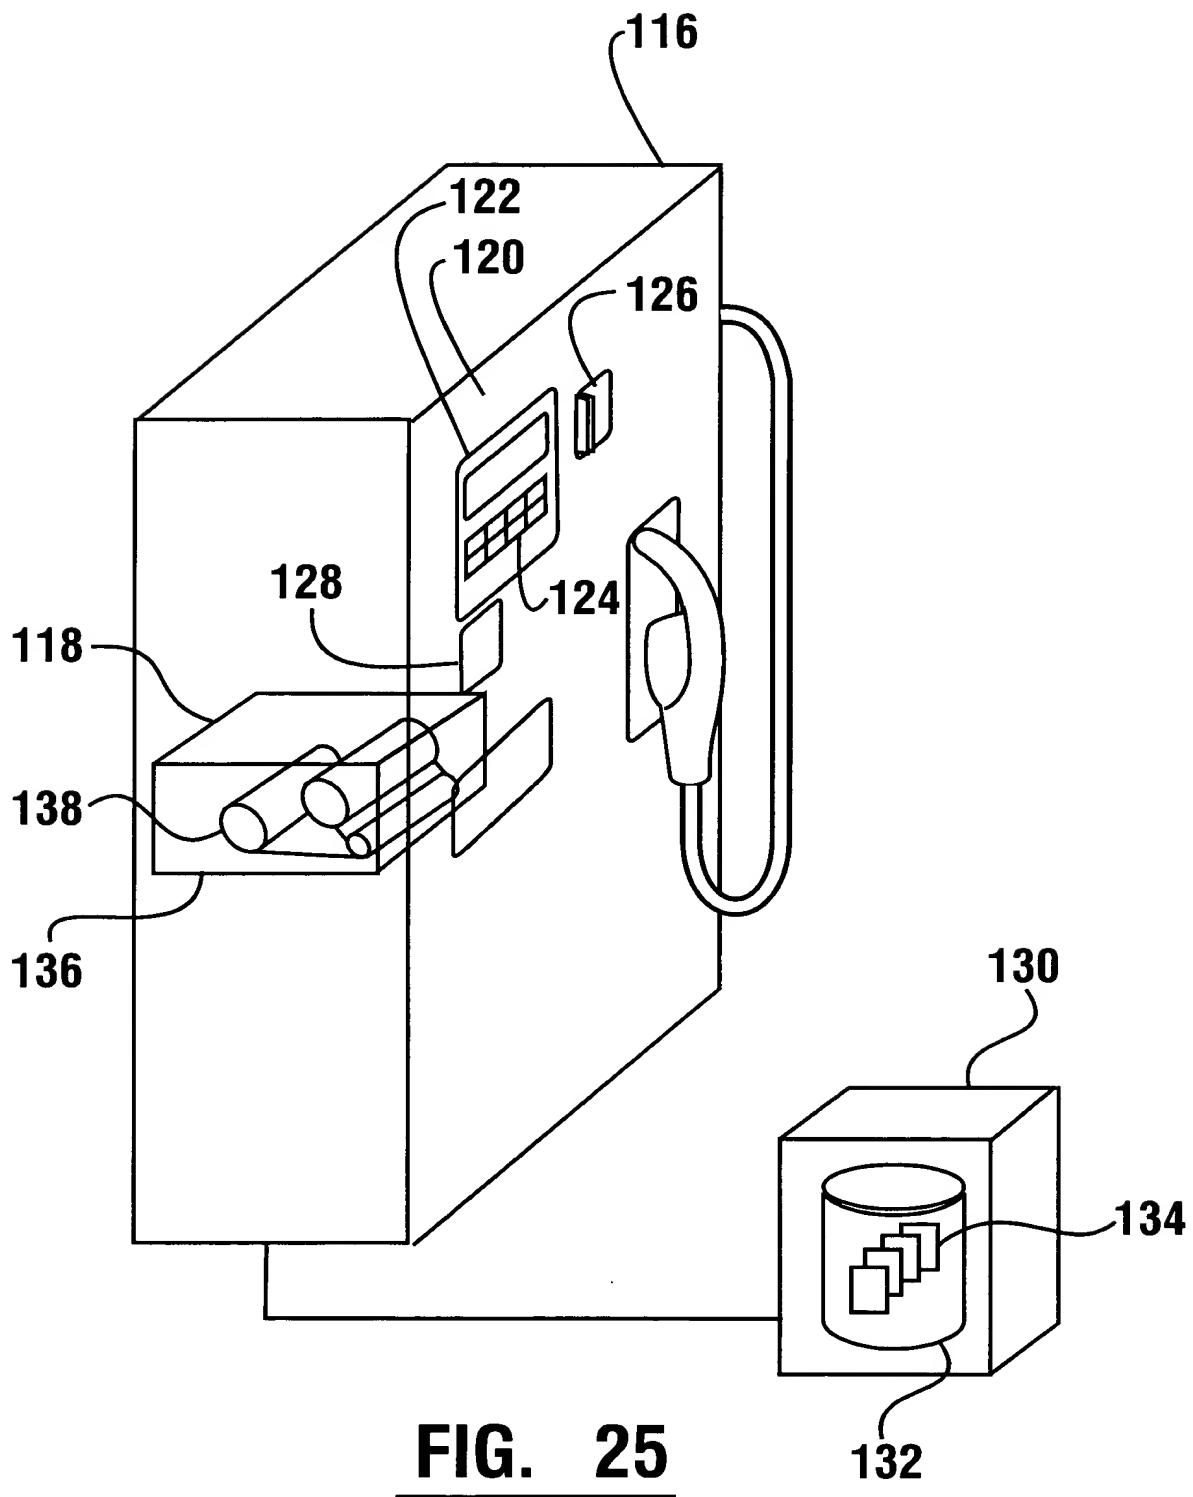


FIG. 26

PAY BY
1 CARD
2 CASH

192

ACTION

- USER SELECTS CASH OR CARD
EXAMPLE CASH

FIG. 27

INSERT BILLS INTO
BILL ACCEPTOR BELOW

PRESS "1" TO RETURN TO
FIRST SCREEN

194

ACTION

- USER INSERTS NOTES INTO
NOTE ACCEPTOR OR RETURNS
TO BEGINNING
EXAMPLE NOTE INPUT

FIG. 28

AVAILABLE CREDIT
\$20.00
PRESS "1" TO RETURN TO
FIRST SCREEN
PRESS "2" TO BEGIN PUMPING

196

ACTION

- USER INSERTS MORE NOTES
OR PRESSES OTHER OPTIONS
EXAMPLE USER PRESSES "2"

FIG. 29

REMOVE NOZZLE
AND PUMP GAS

198

ACTION

- USER REMOVES NOZZLE
AND PUMPS
- PUMP STOPS WHEN AVAILABLE
CREDIT IS REACHED OR
CUSTOMER SHUTS OFF

FIG. 30

**YOUR AVAILABLE
CREDIT IS GREATER
THAN YOUR CHARGE
A CASH VOUCHER FOR
THE DIFFERENCE IS
PRINTING**

200

ACTION

- MACHINE PRINTS VOUCHER
FOR DIFFERENCE**

FIG. 31

**PLEASE PRESENT
VOUCHER INSIDE
TO RECEIVE YOUR
CASH**

202

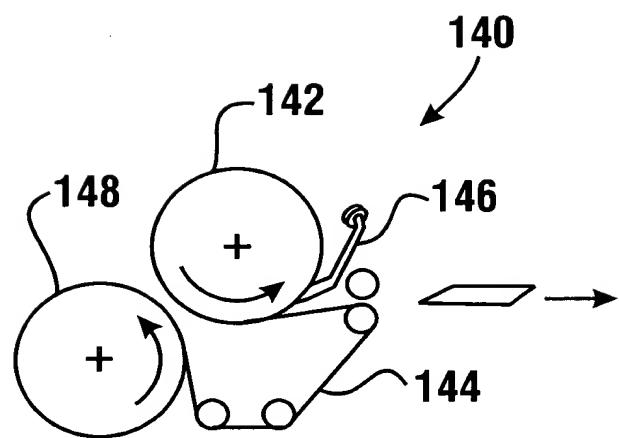


FIG. 32

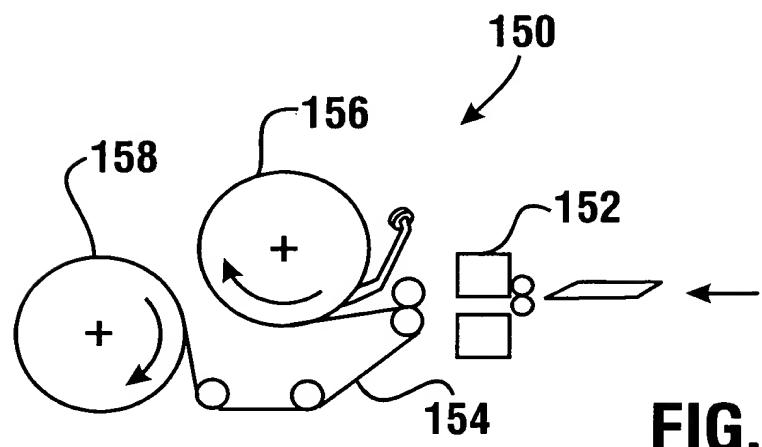


FIG. 33

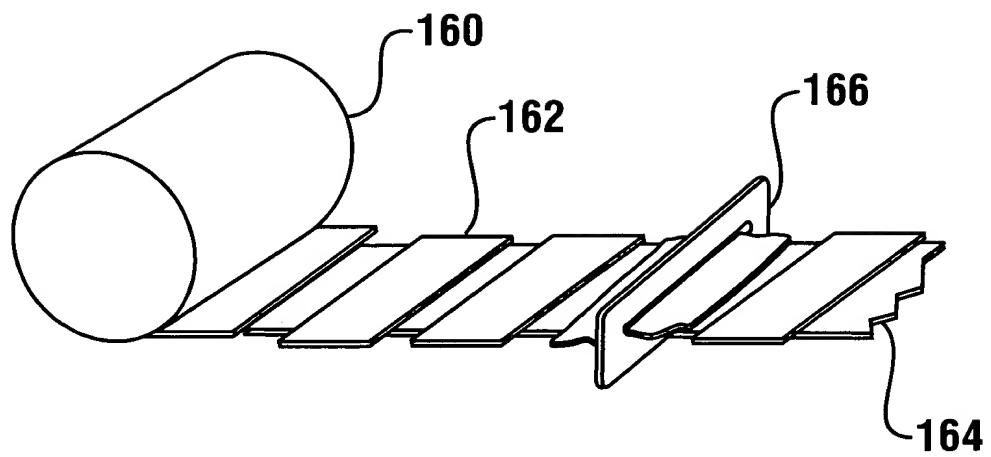


FIG. 34

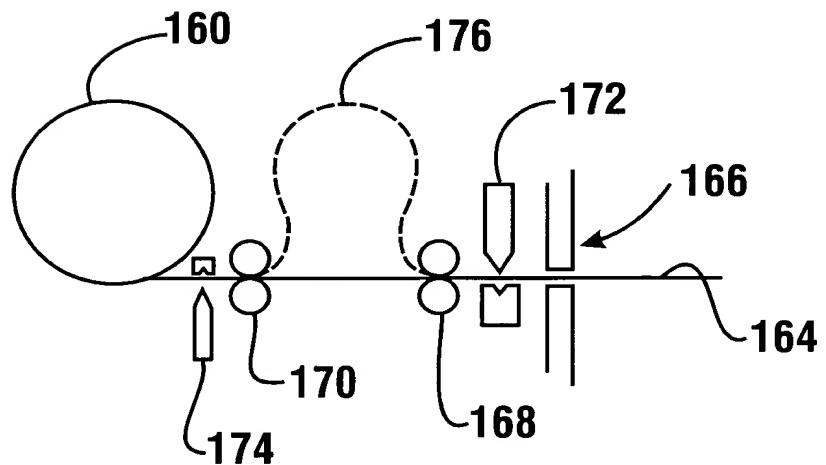


FIG. 35

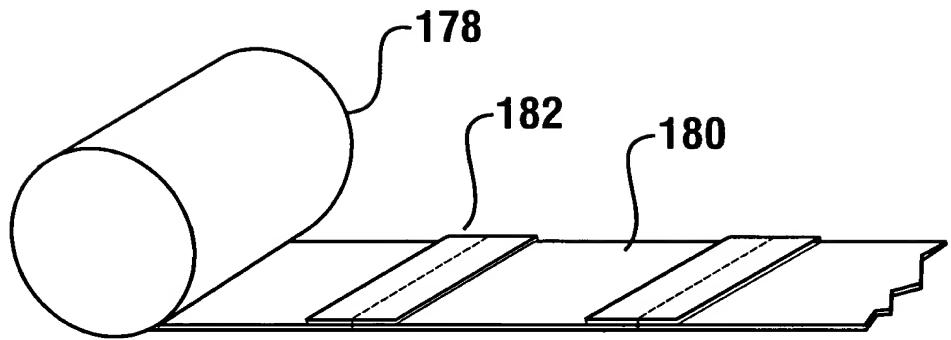


FIG. 36

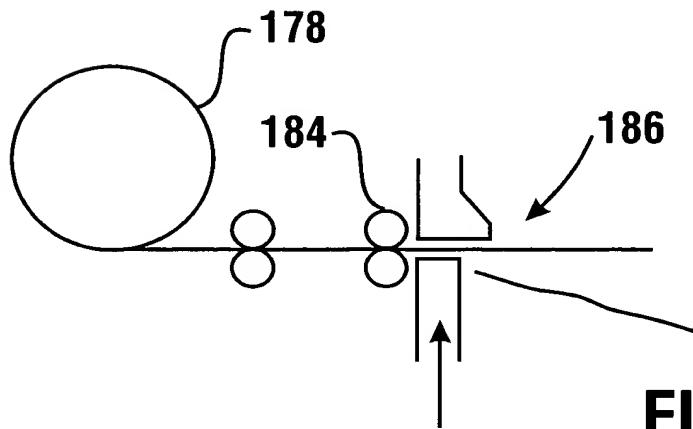


FIG. 37

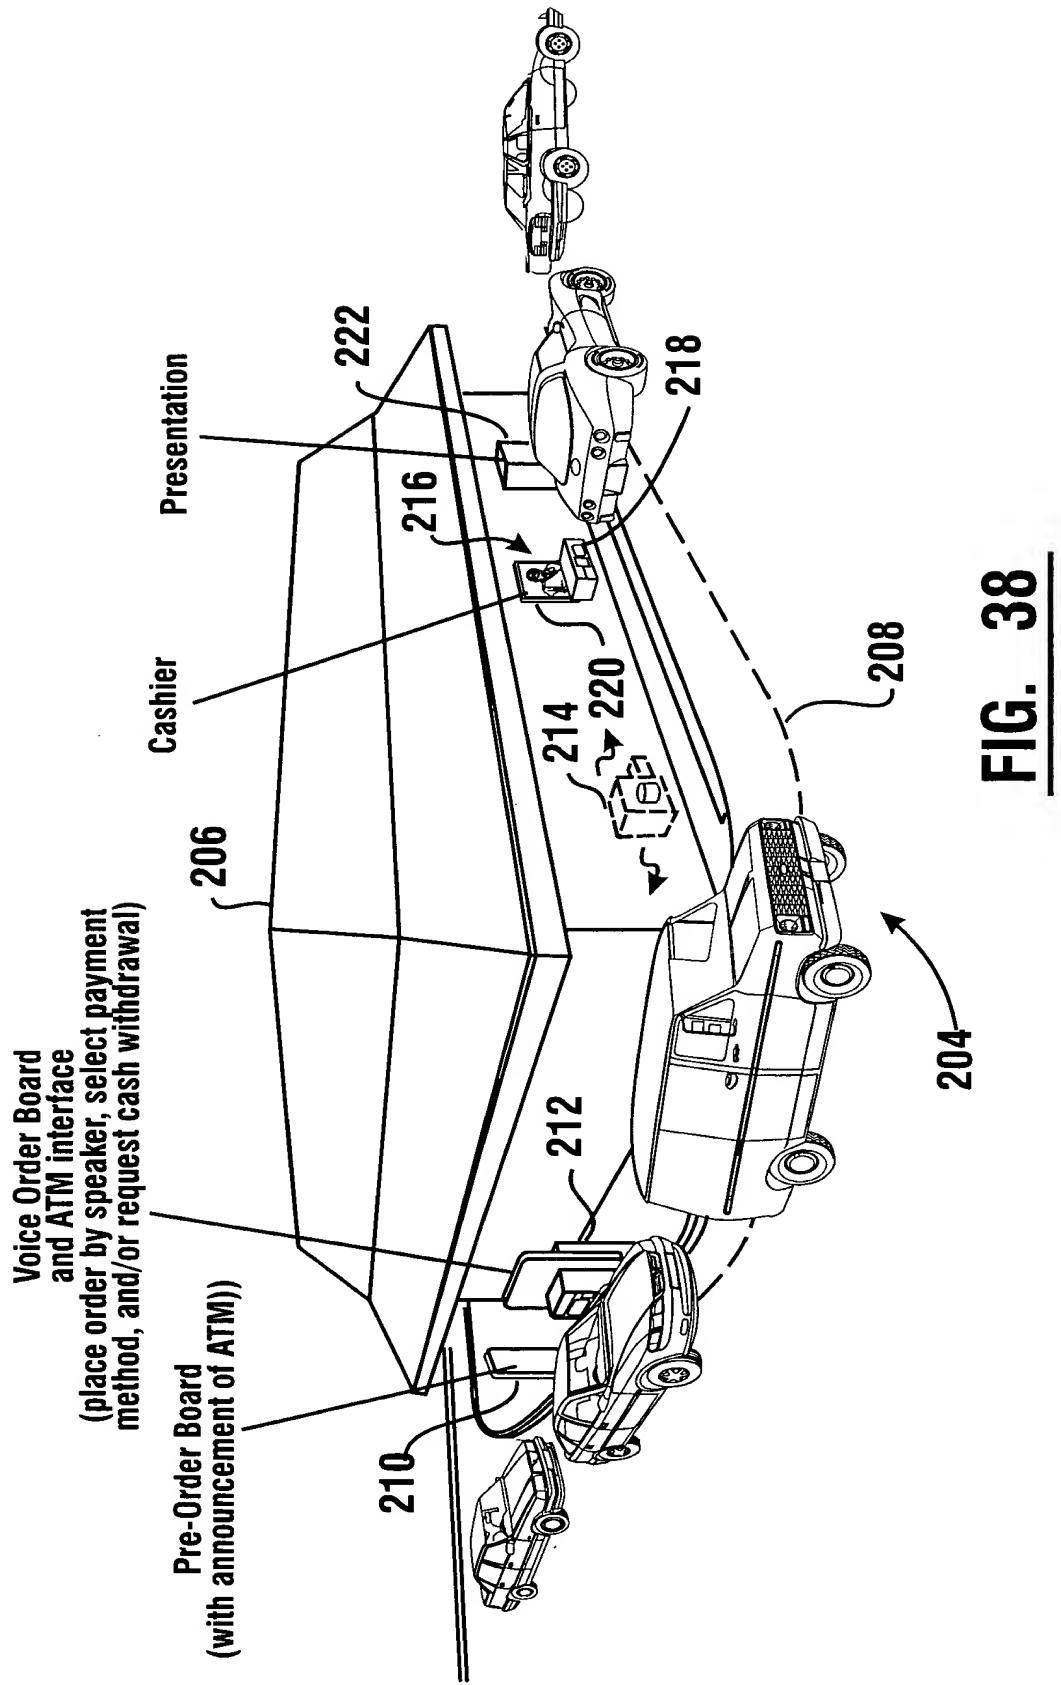
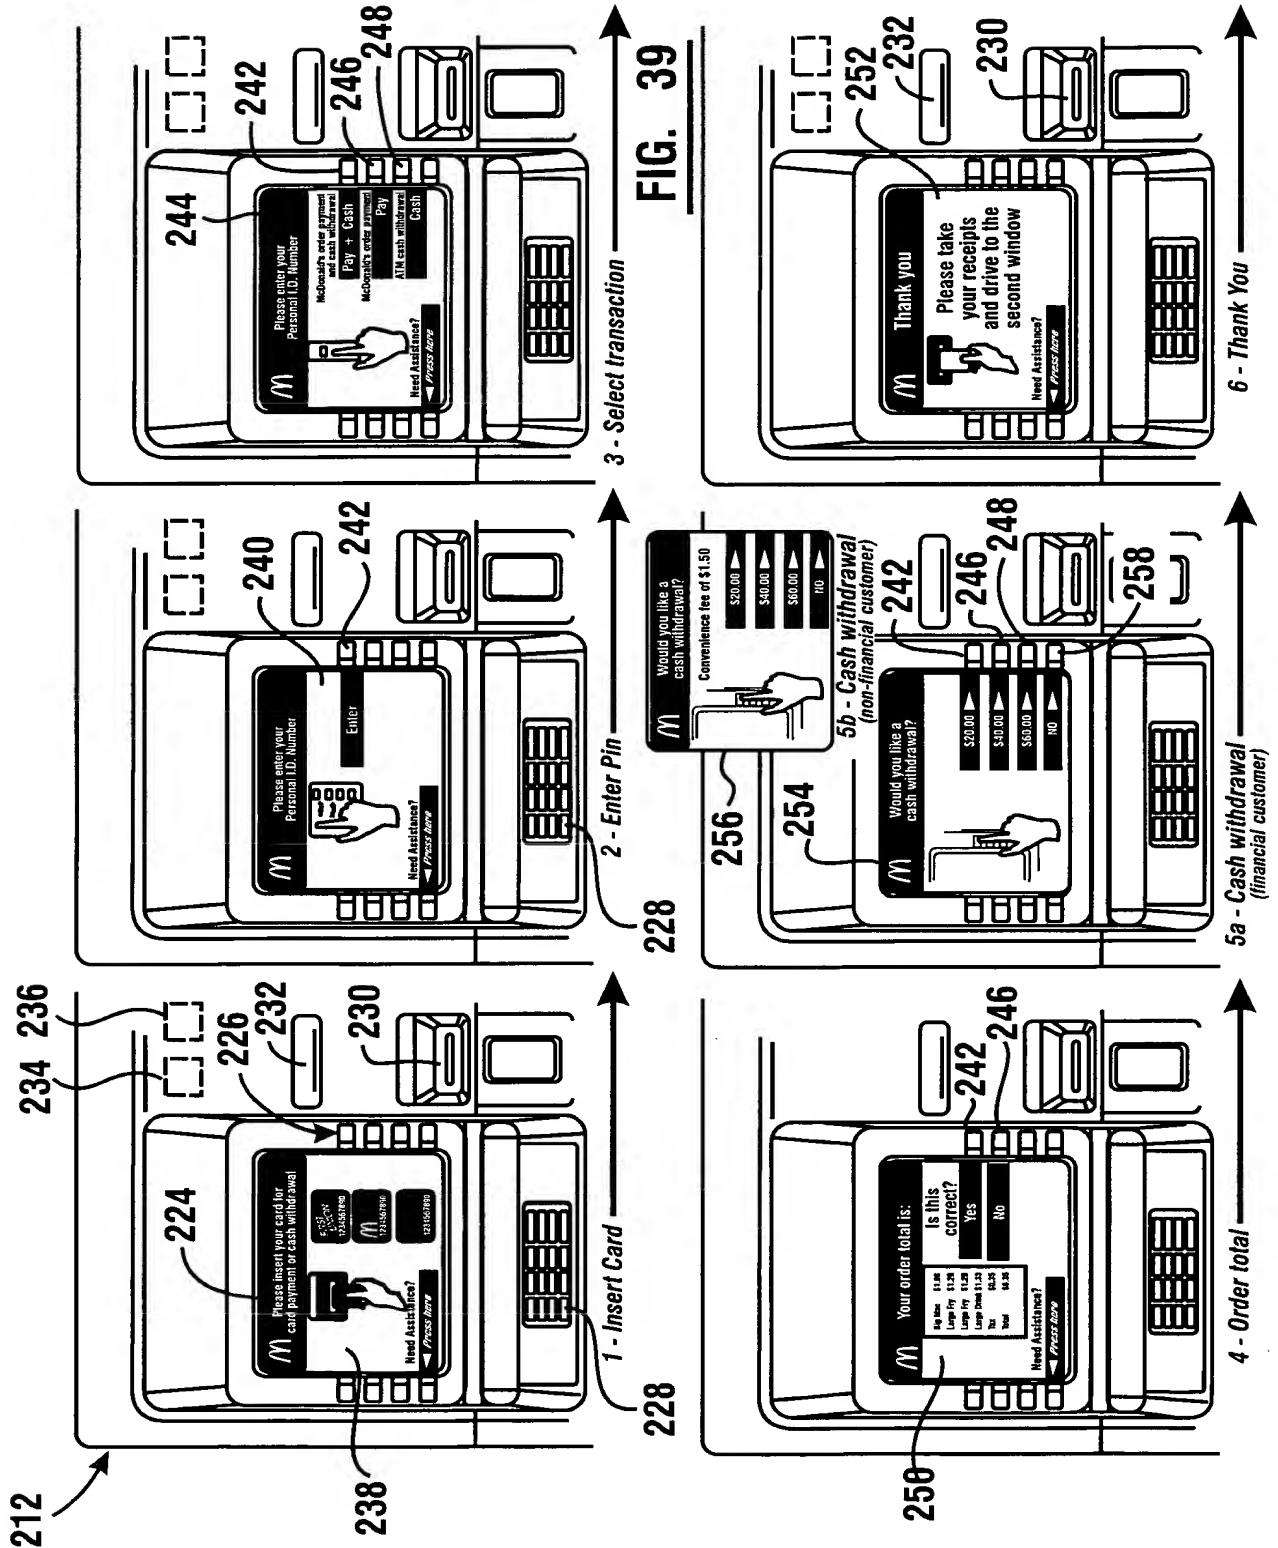


FIG. 38





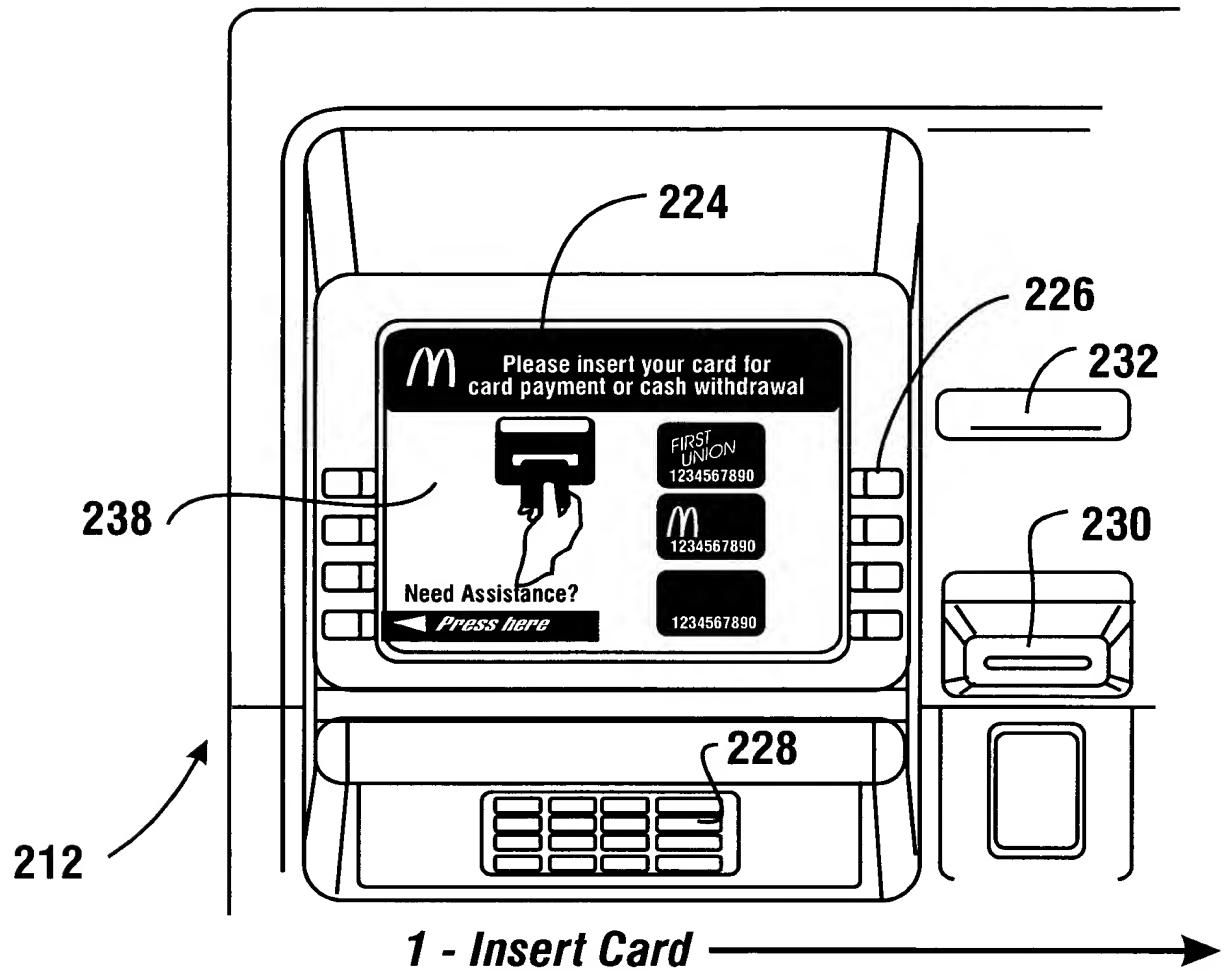


FIG. 40

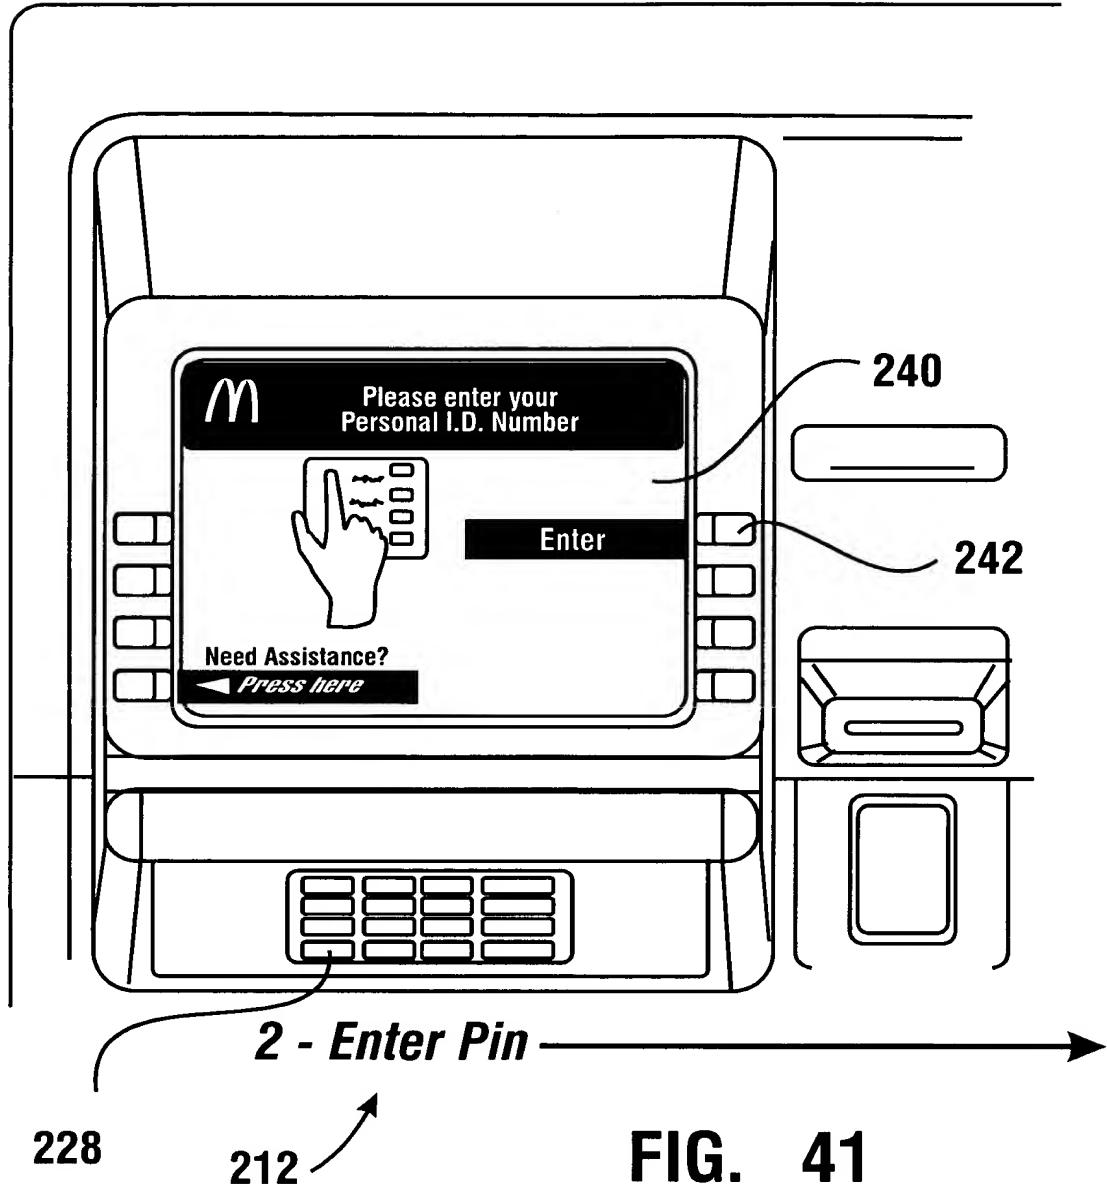


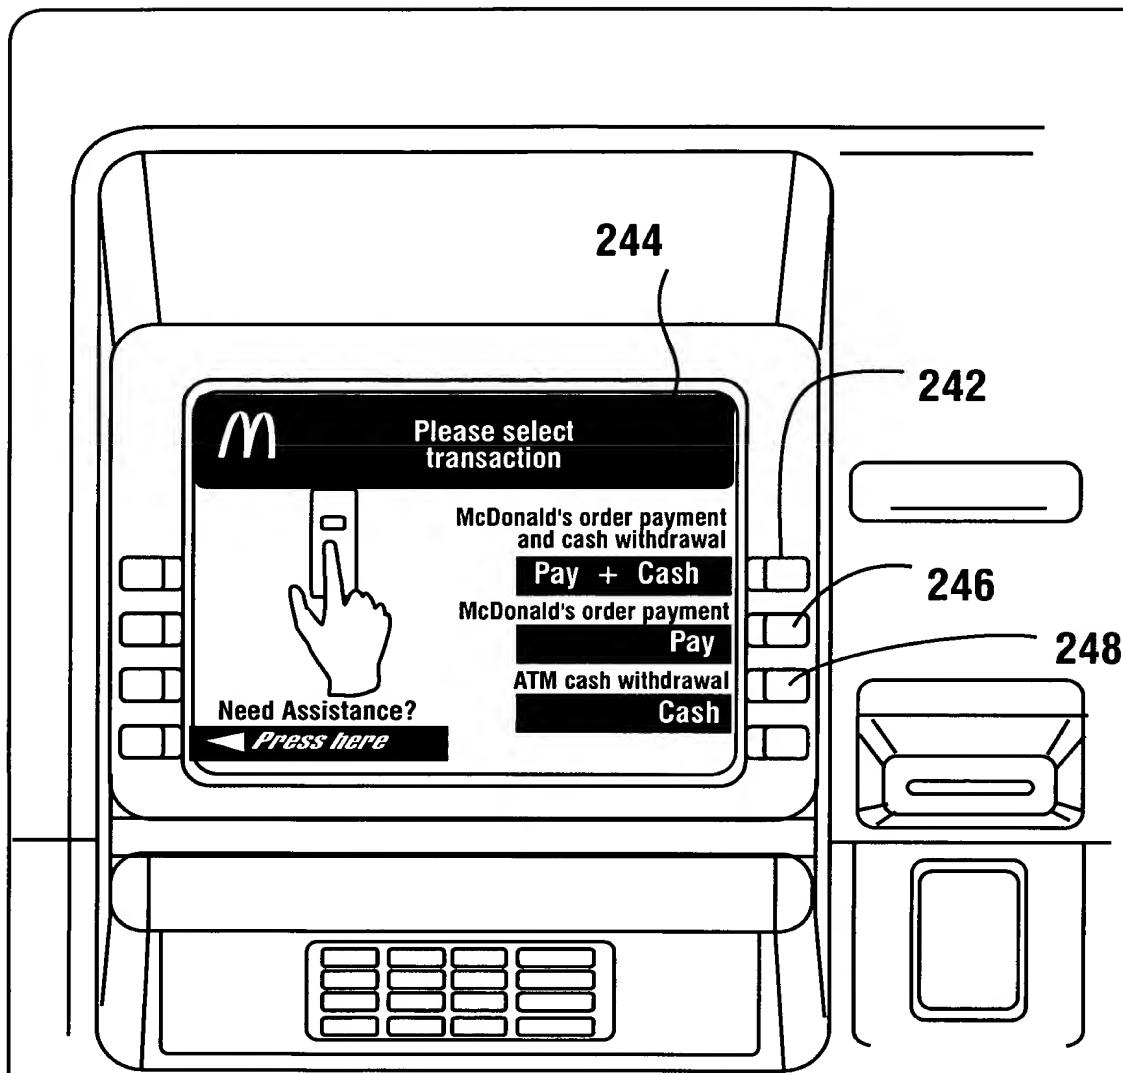

3 - Select transaction →

212 ↗

FIG. 42

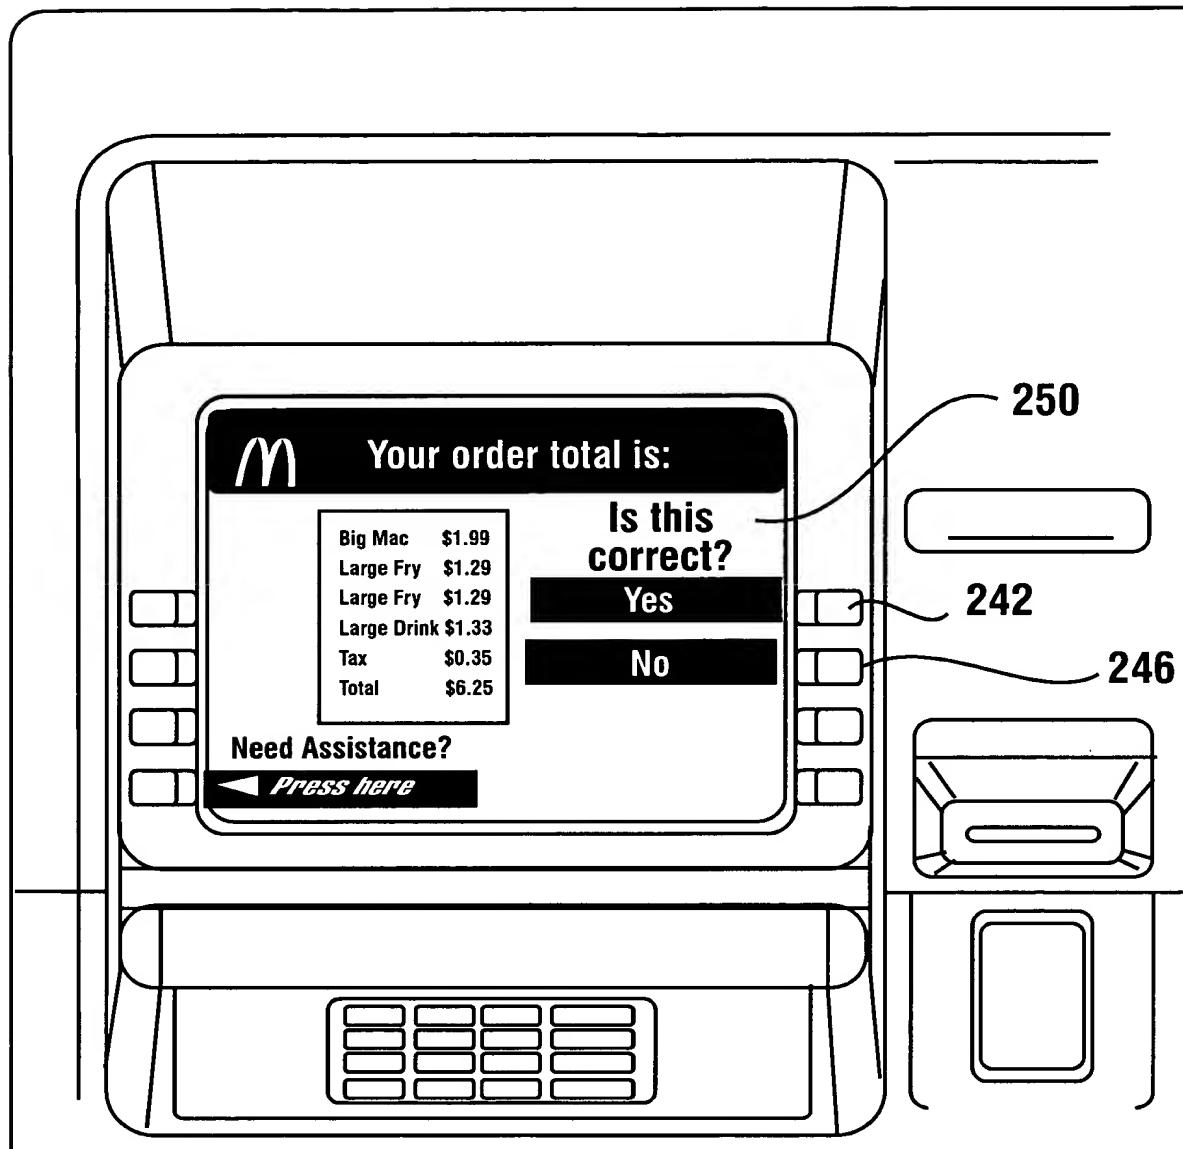

4 - *Order total* →

212

FIG. 43

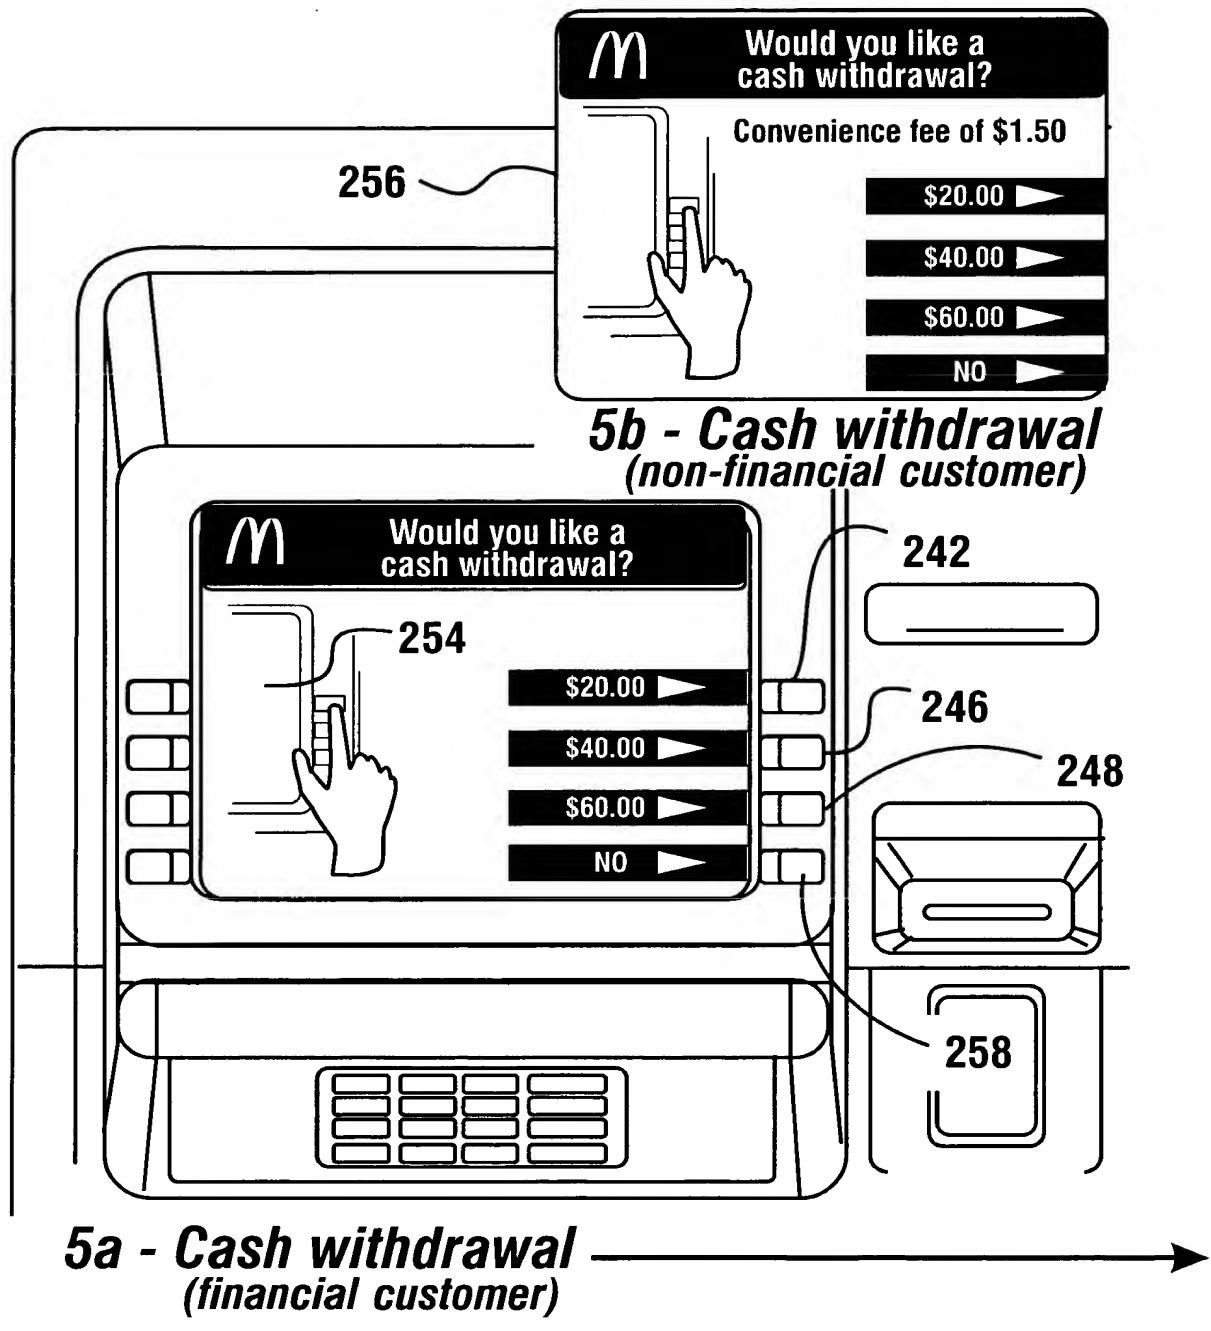


FIG. 44



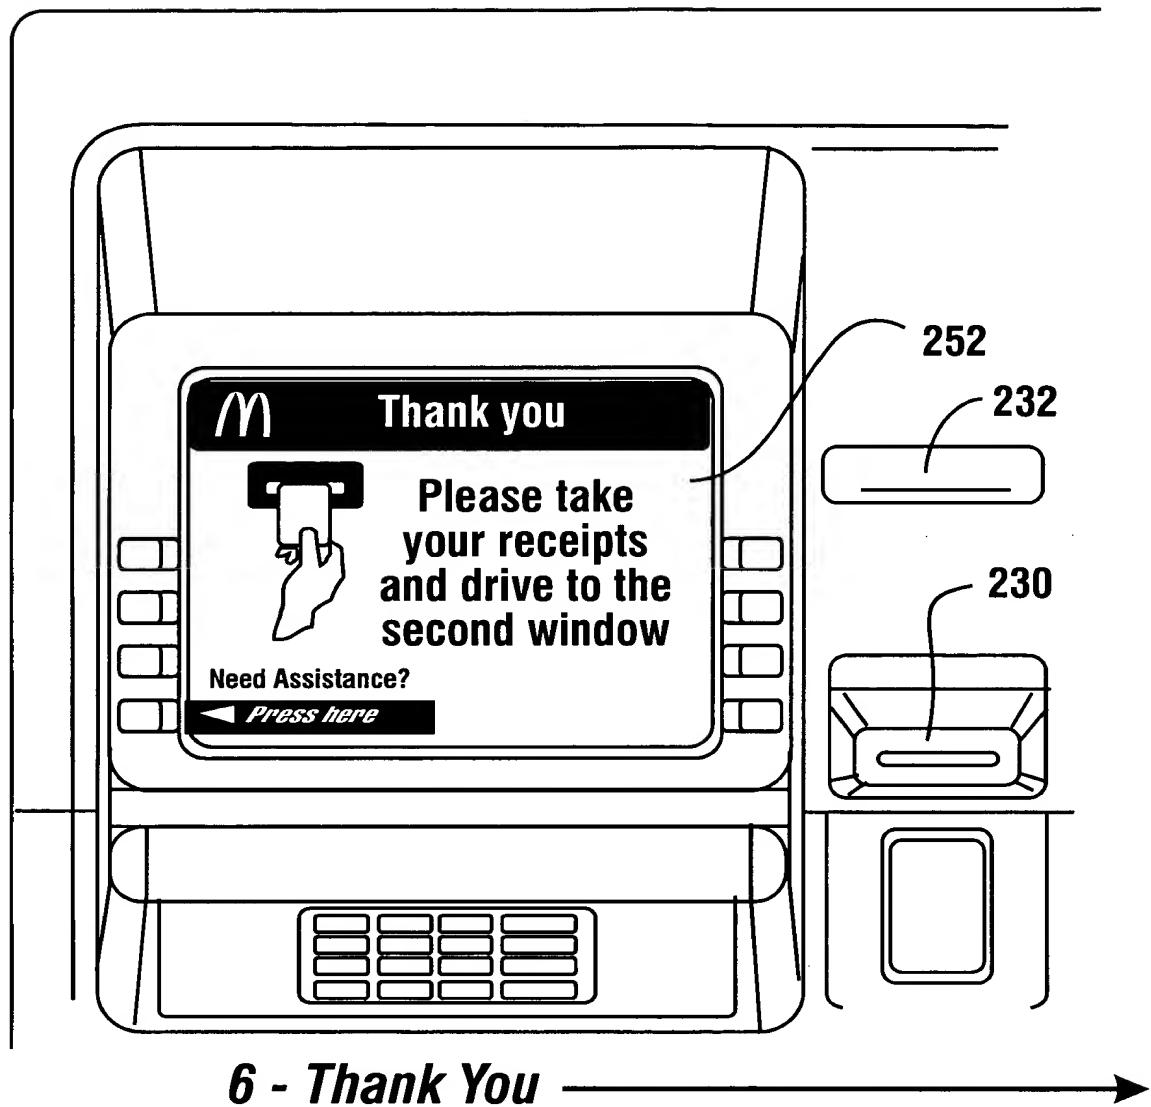


FIG. 45

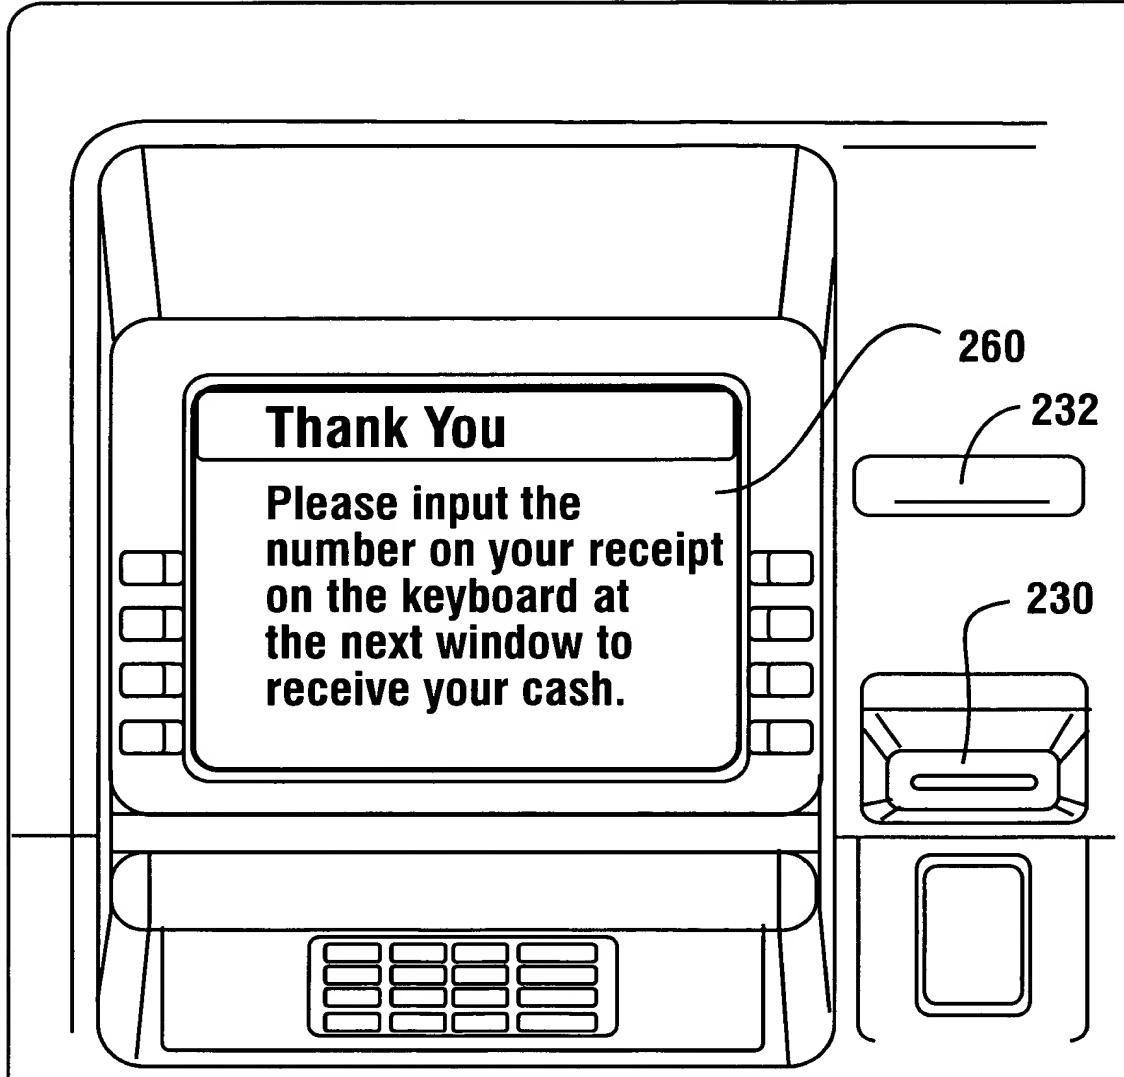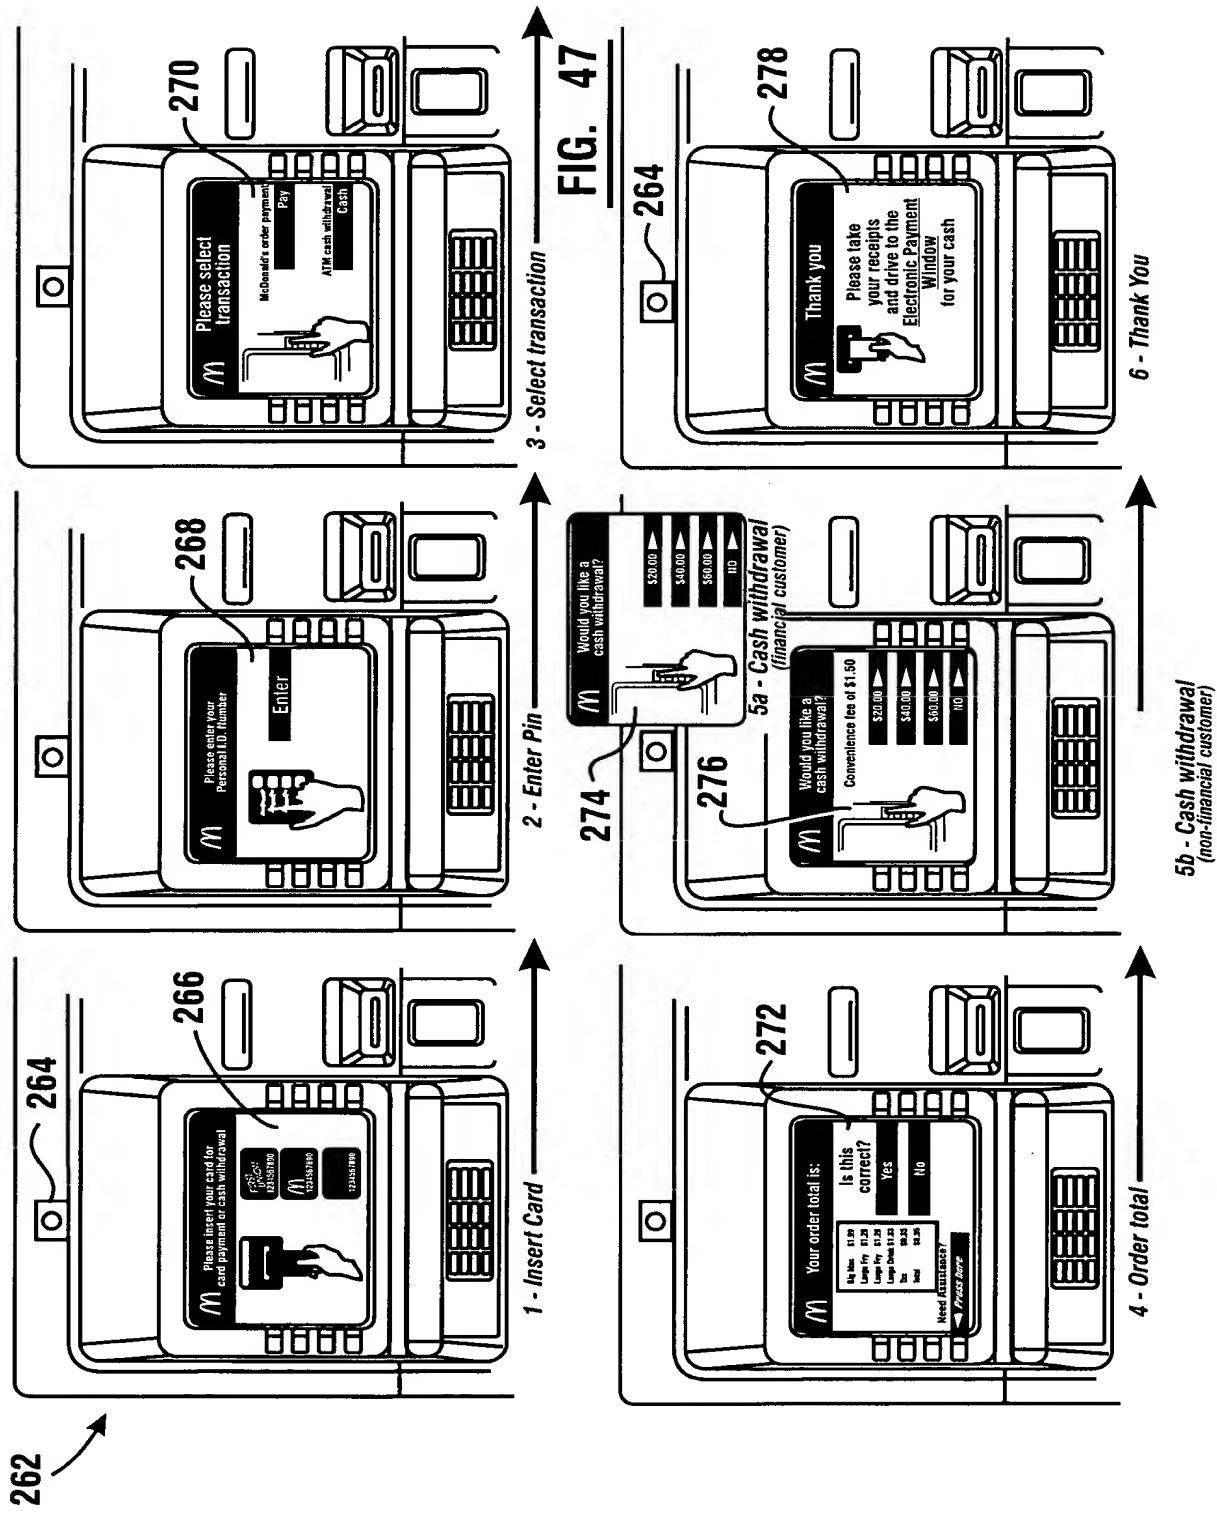

6 - Thank You

FIG. 46



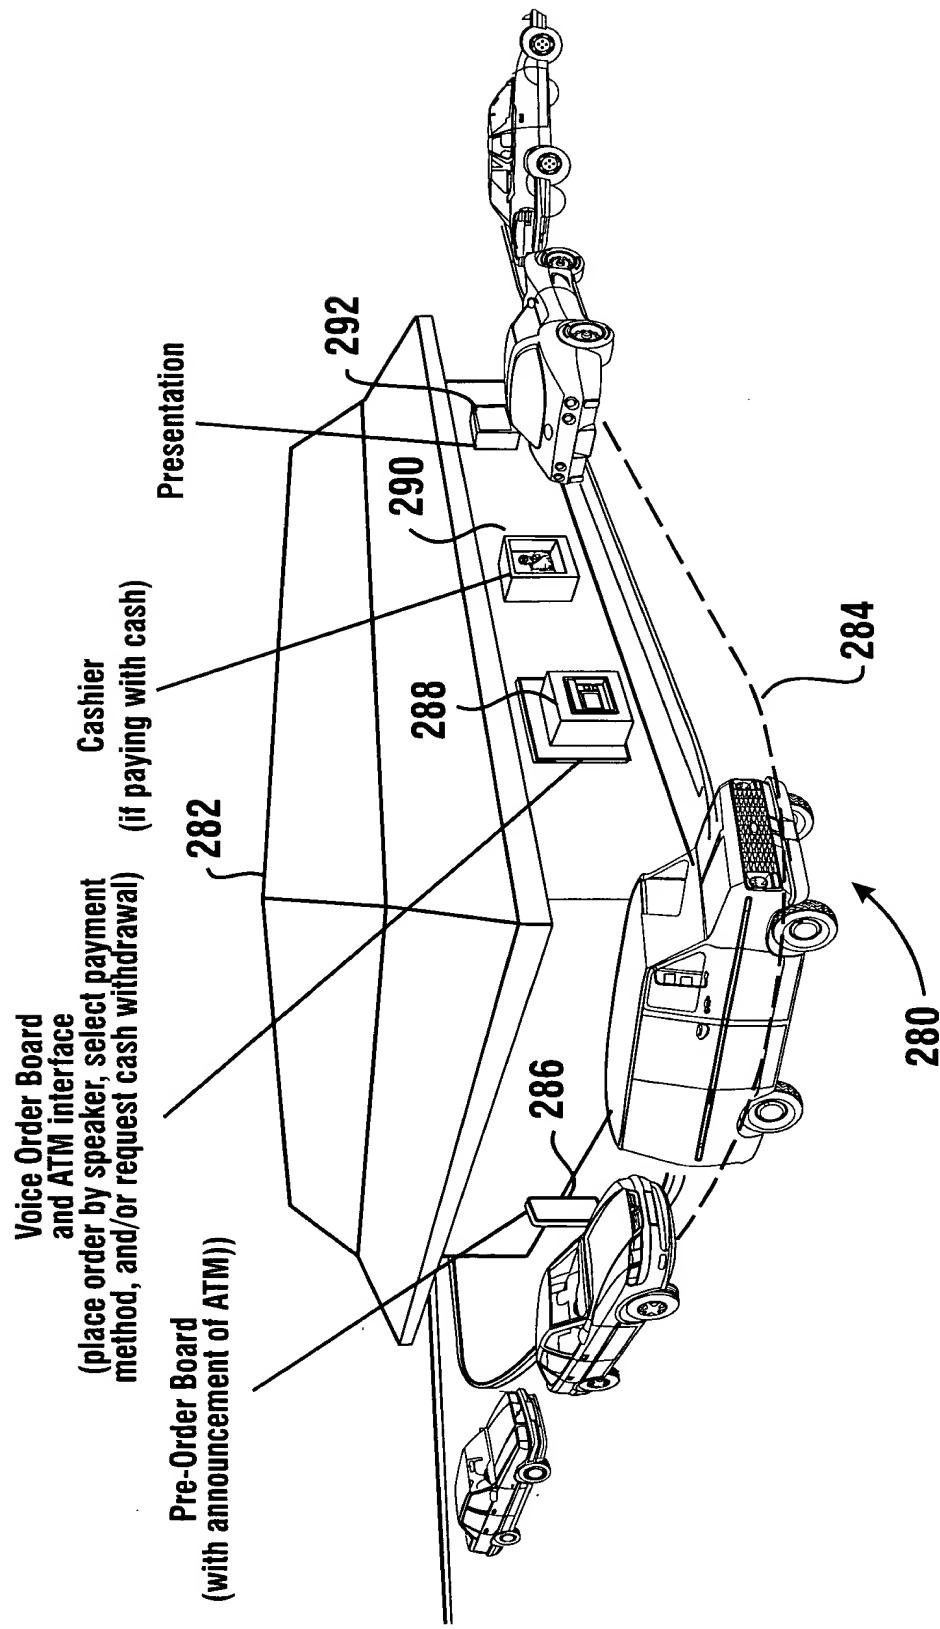
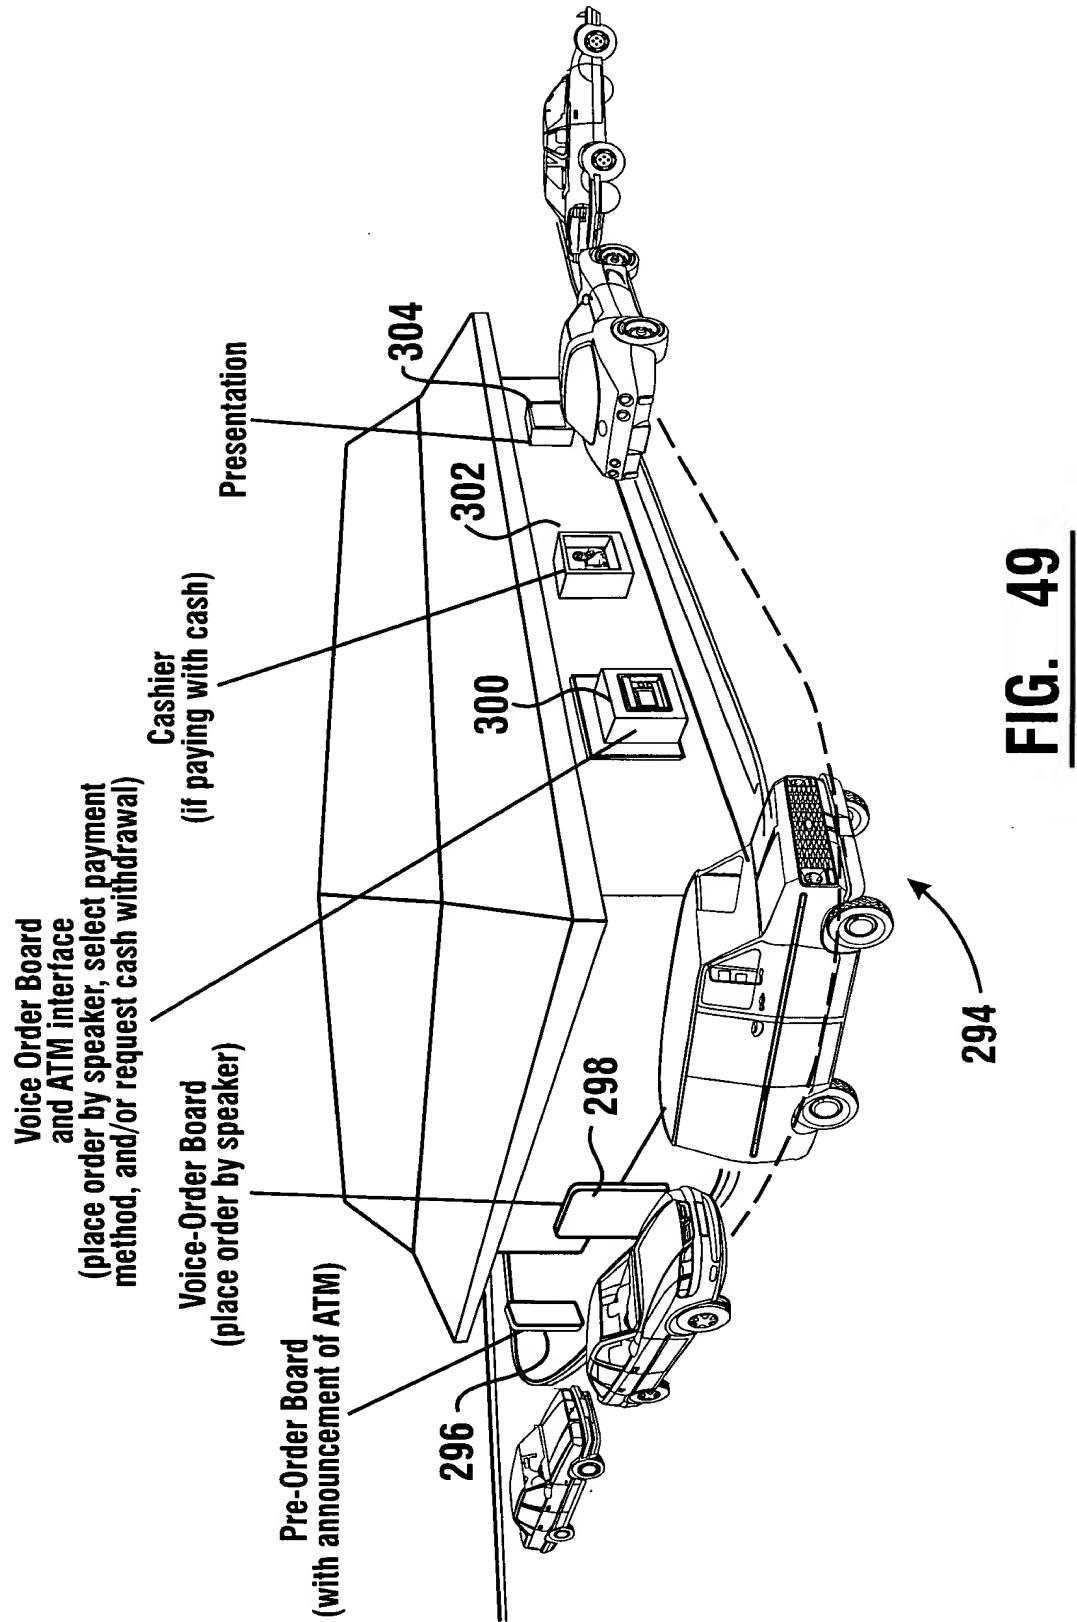


FIG. 48



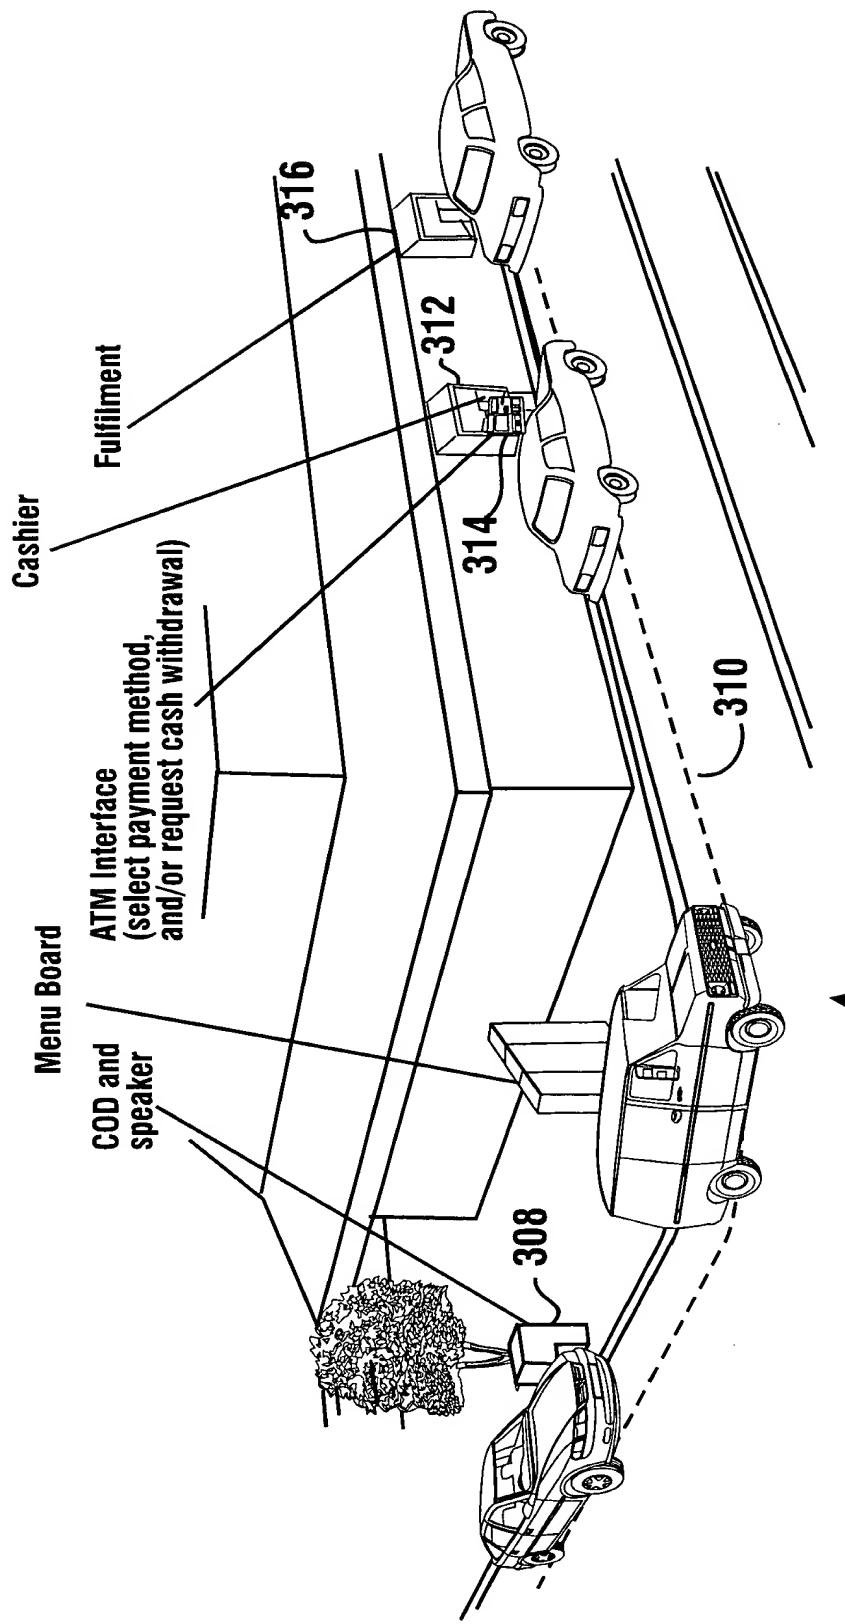
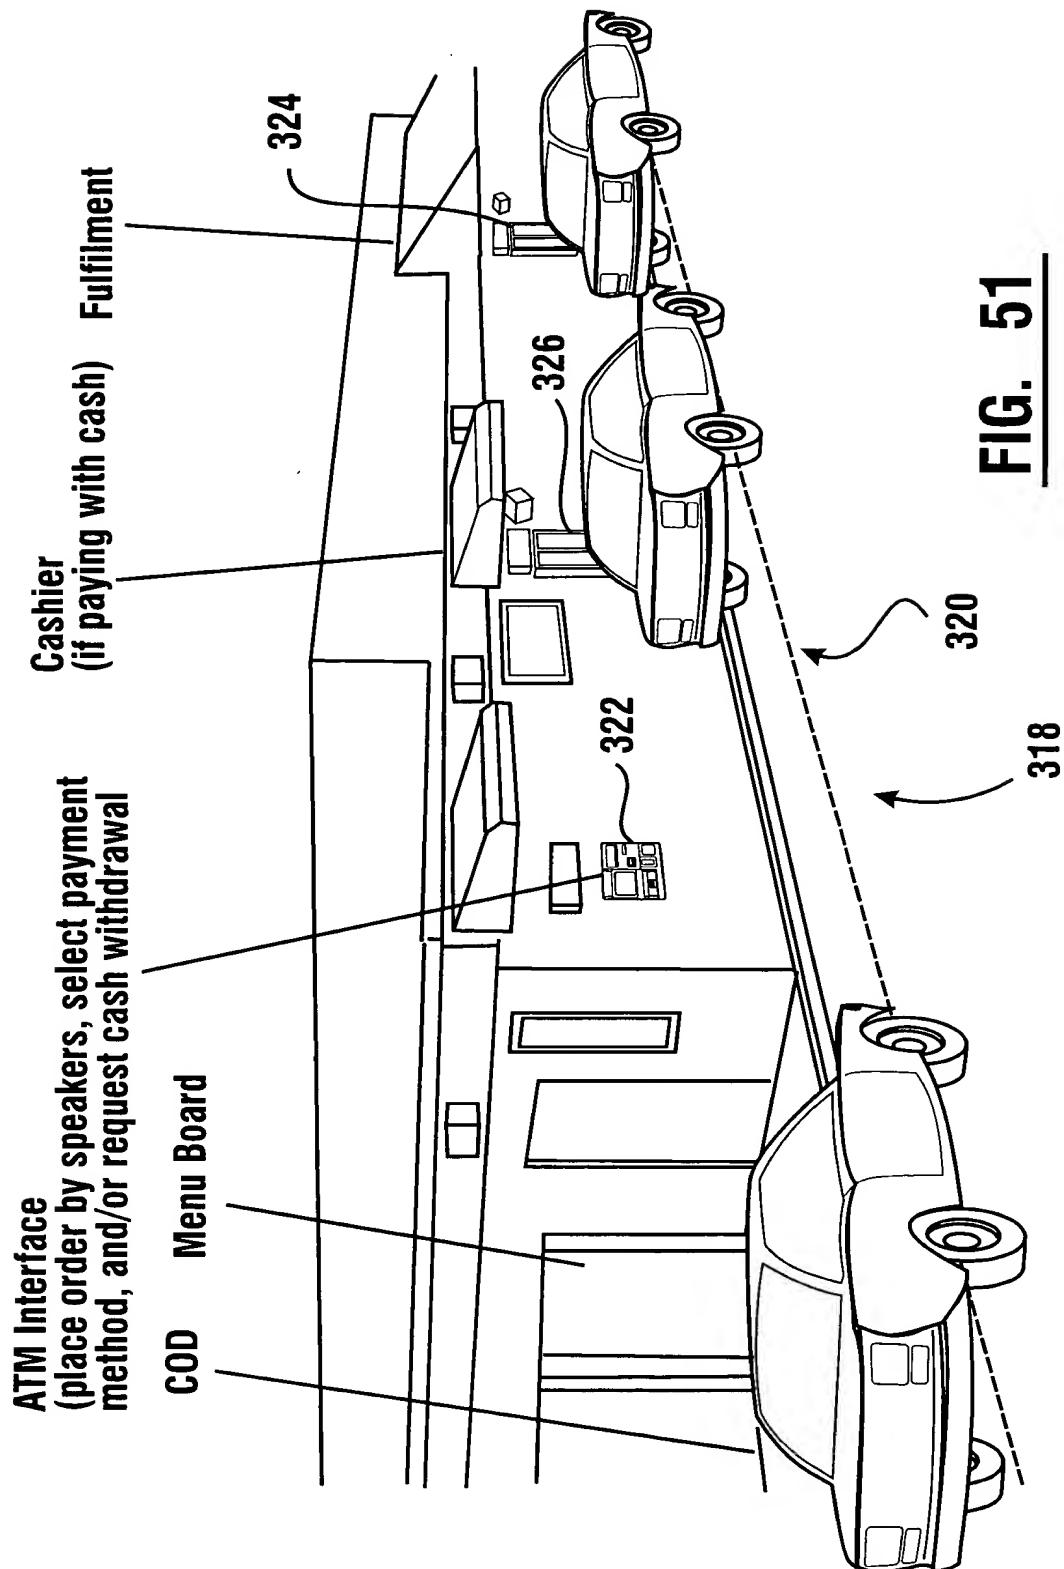
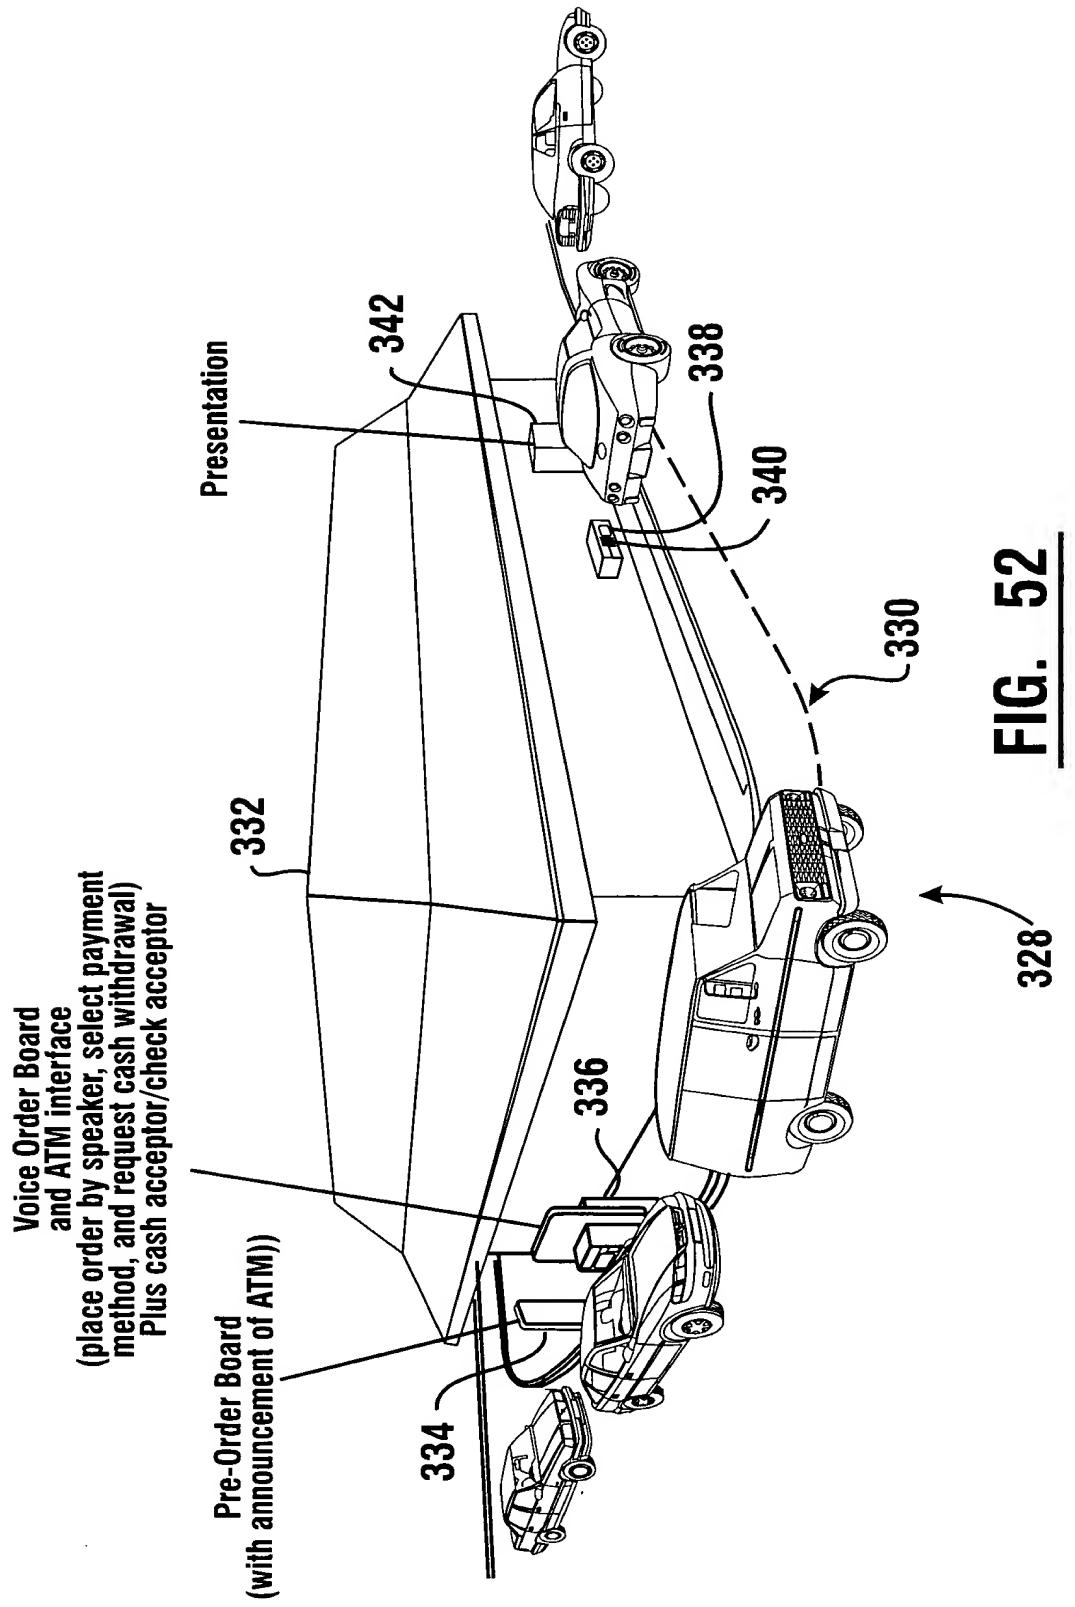


FIG. 50






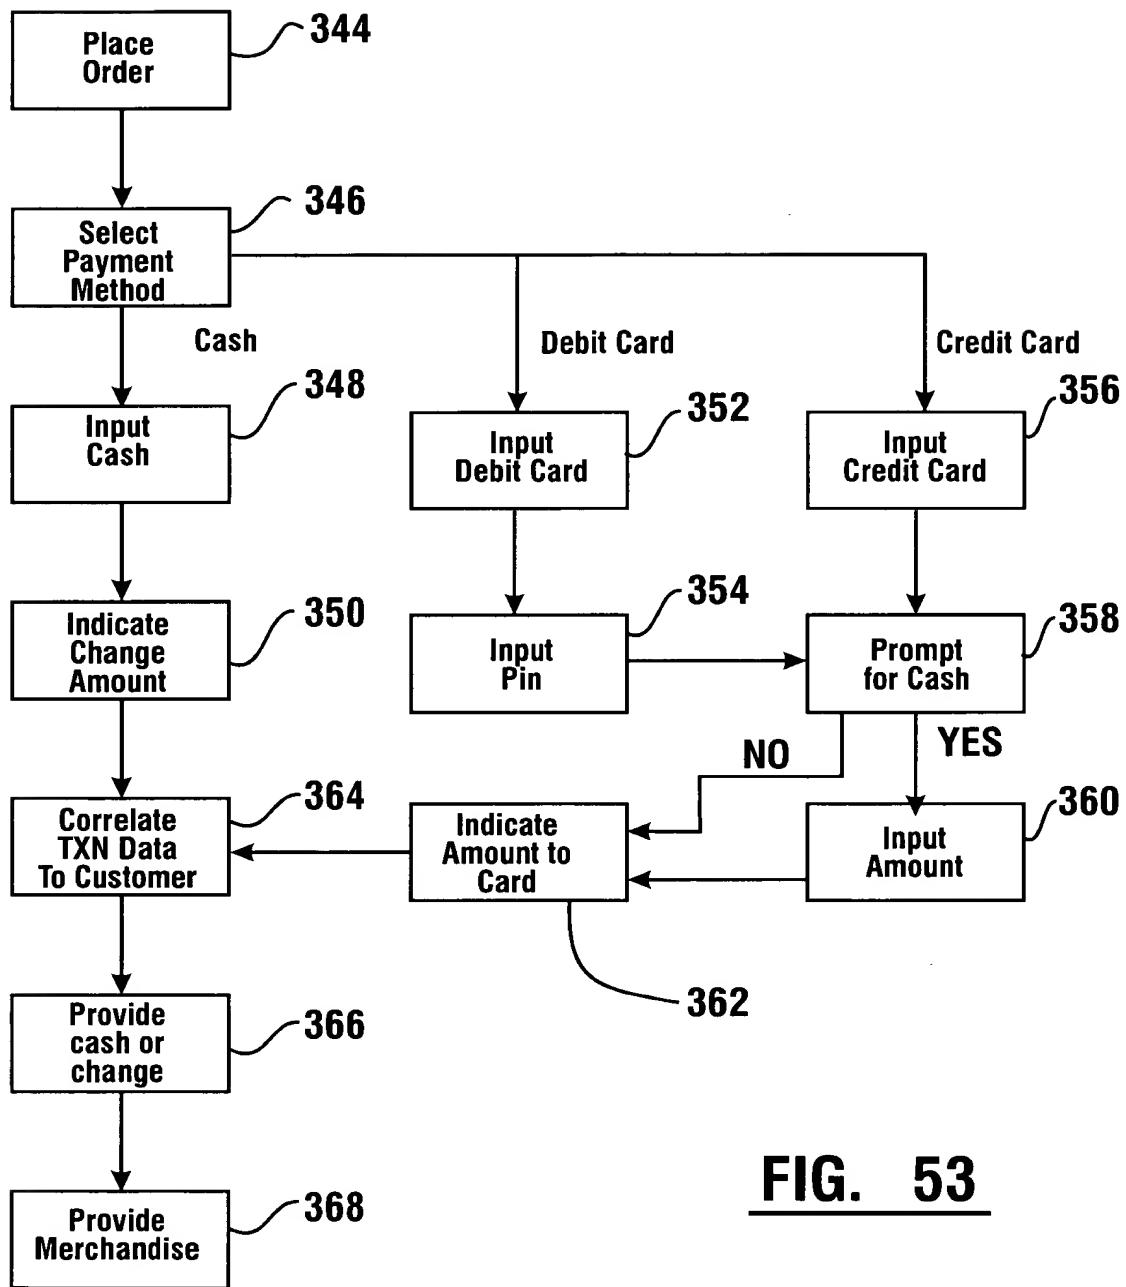


FIG. 53


FIG. 54



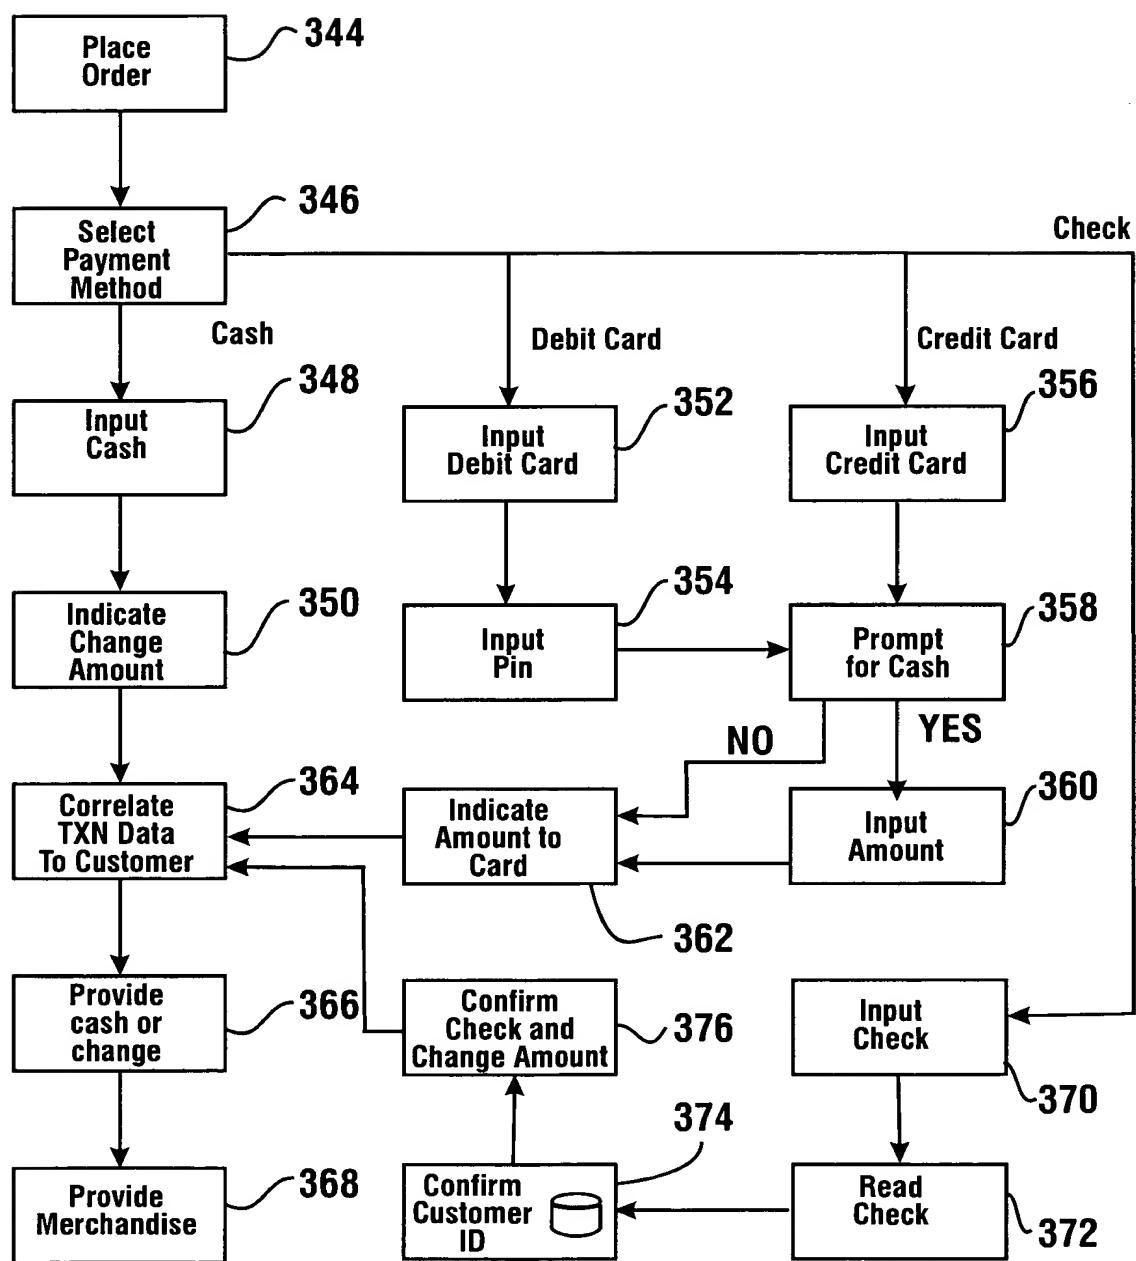

378

FIG. 55

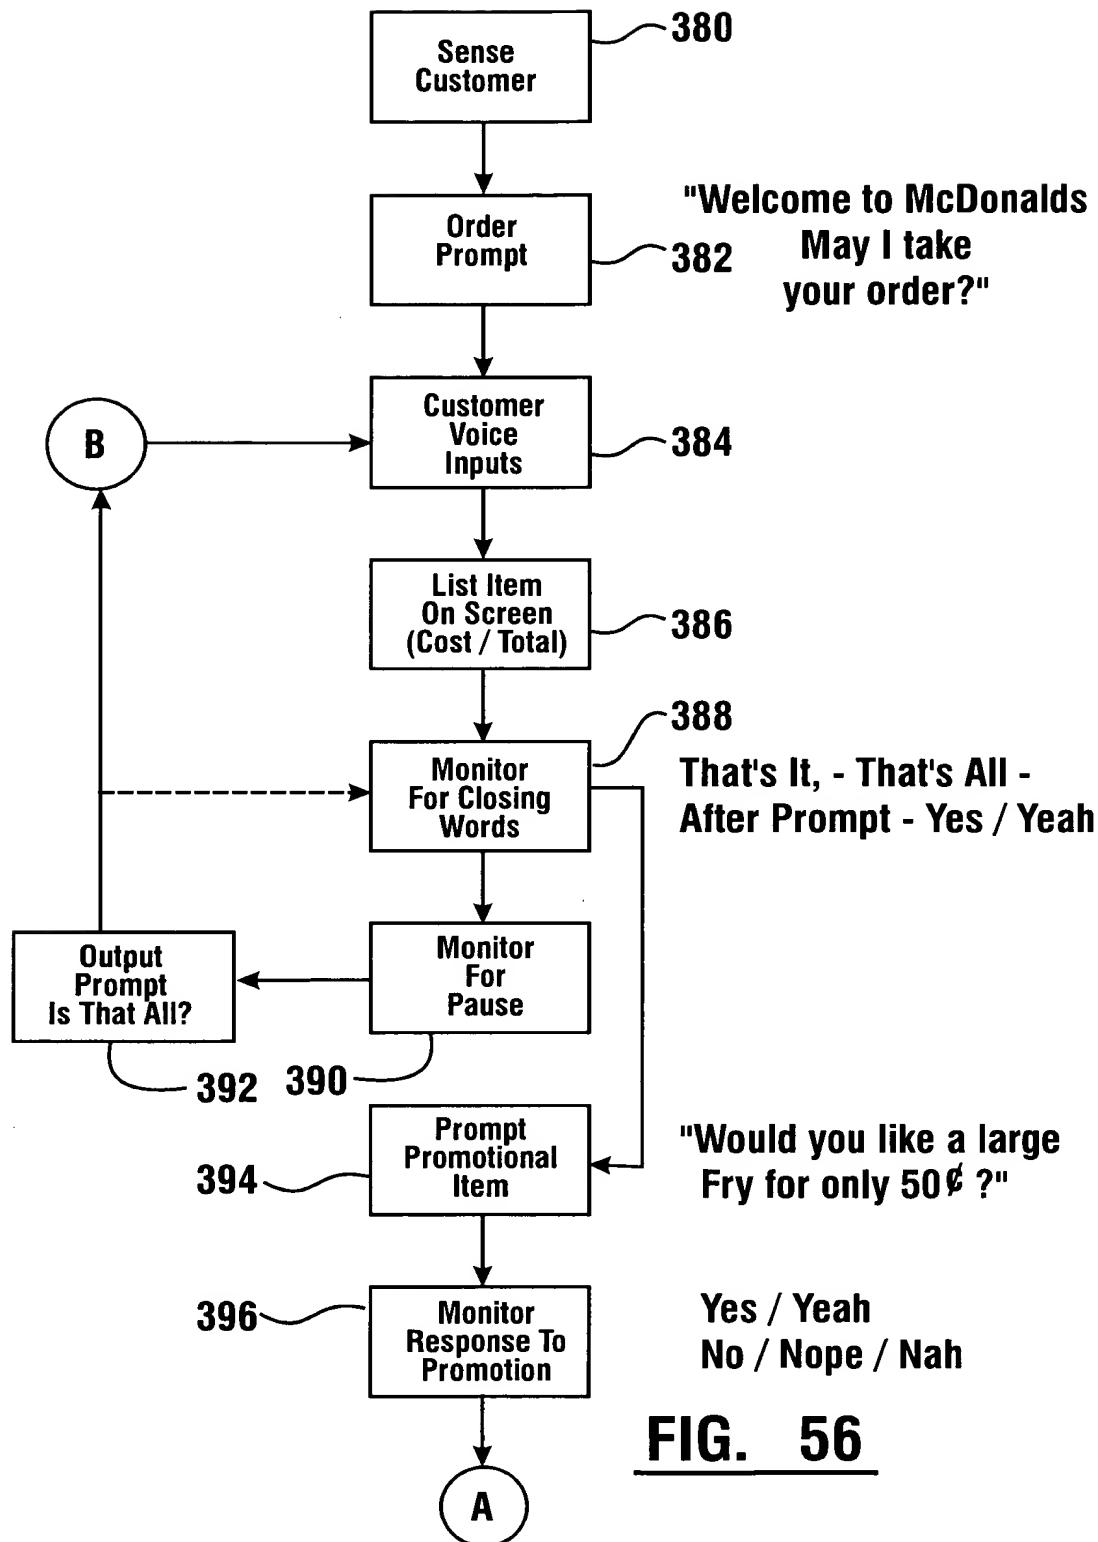

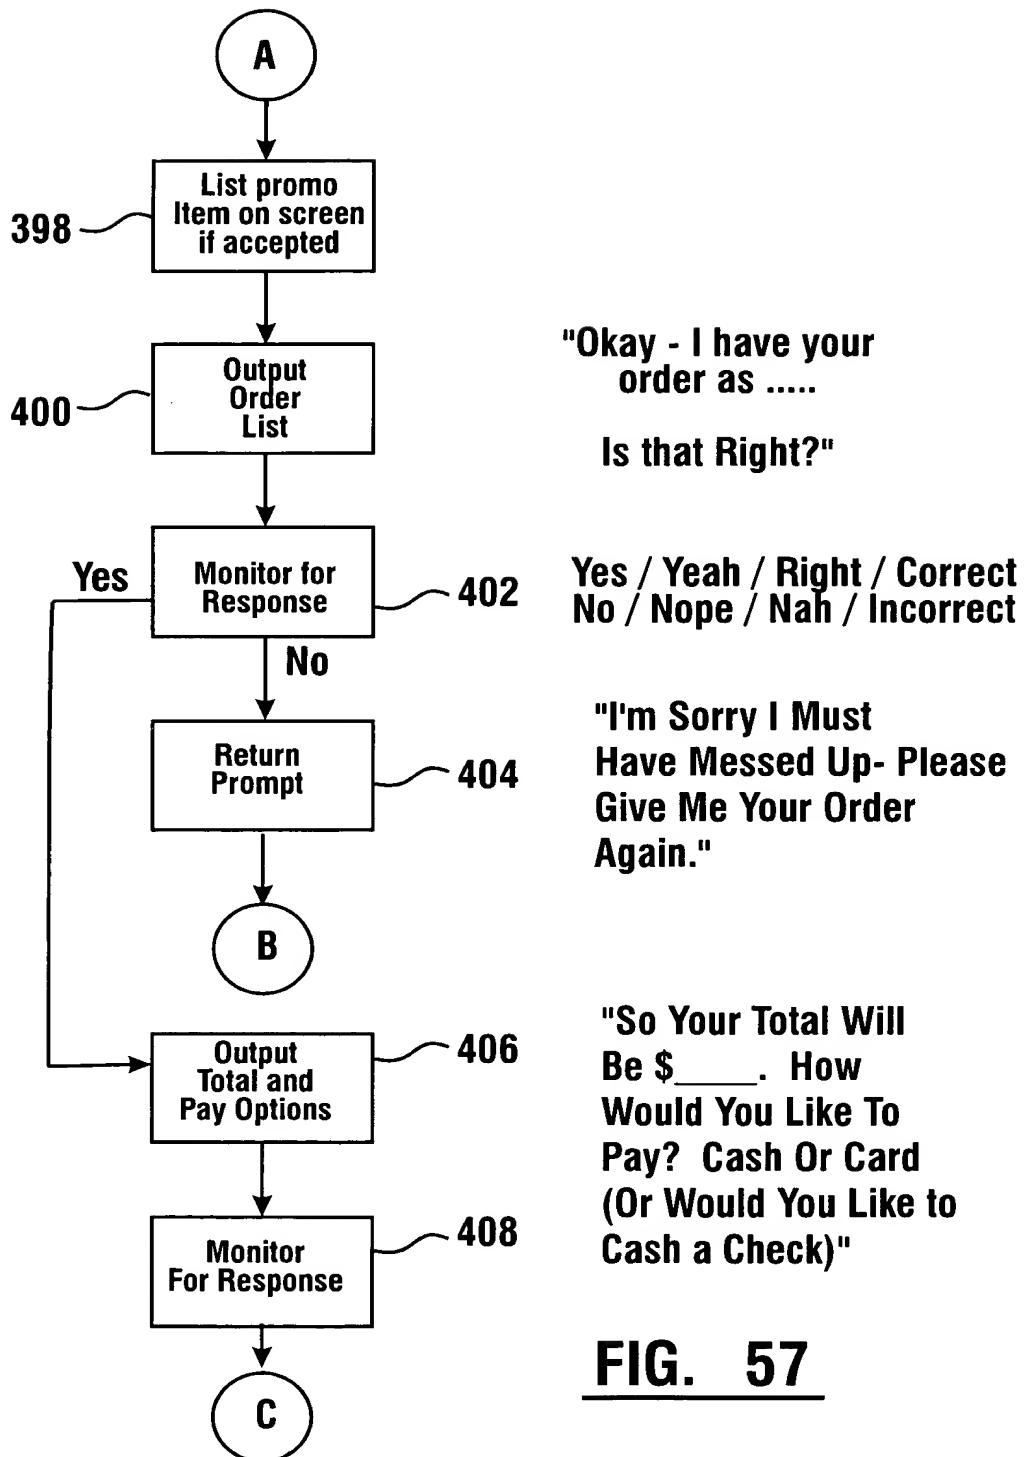


FIG. 57

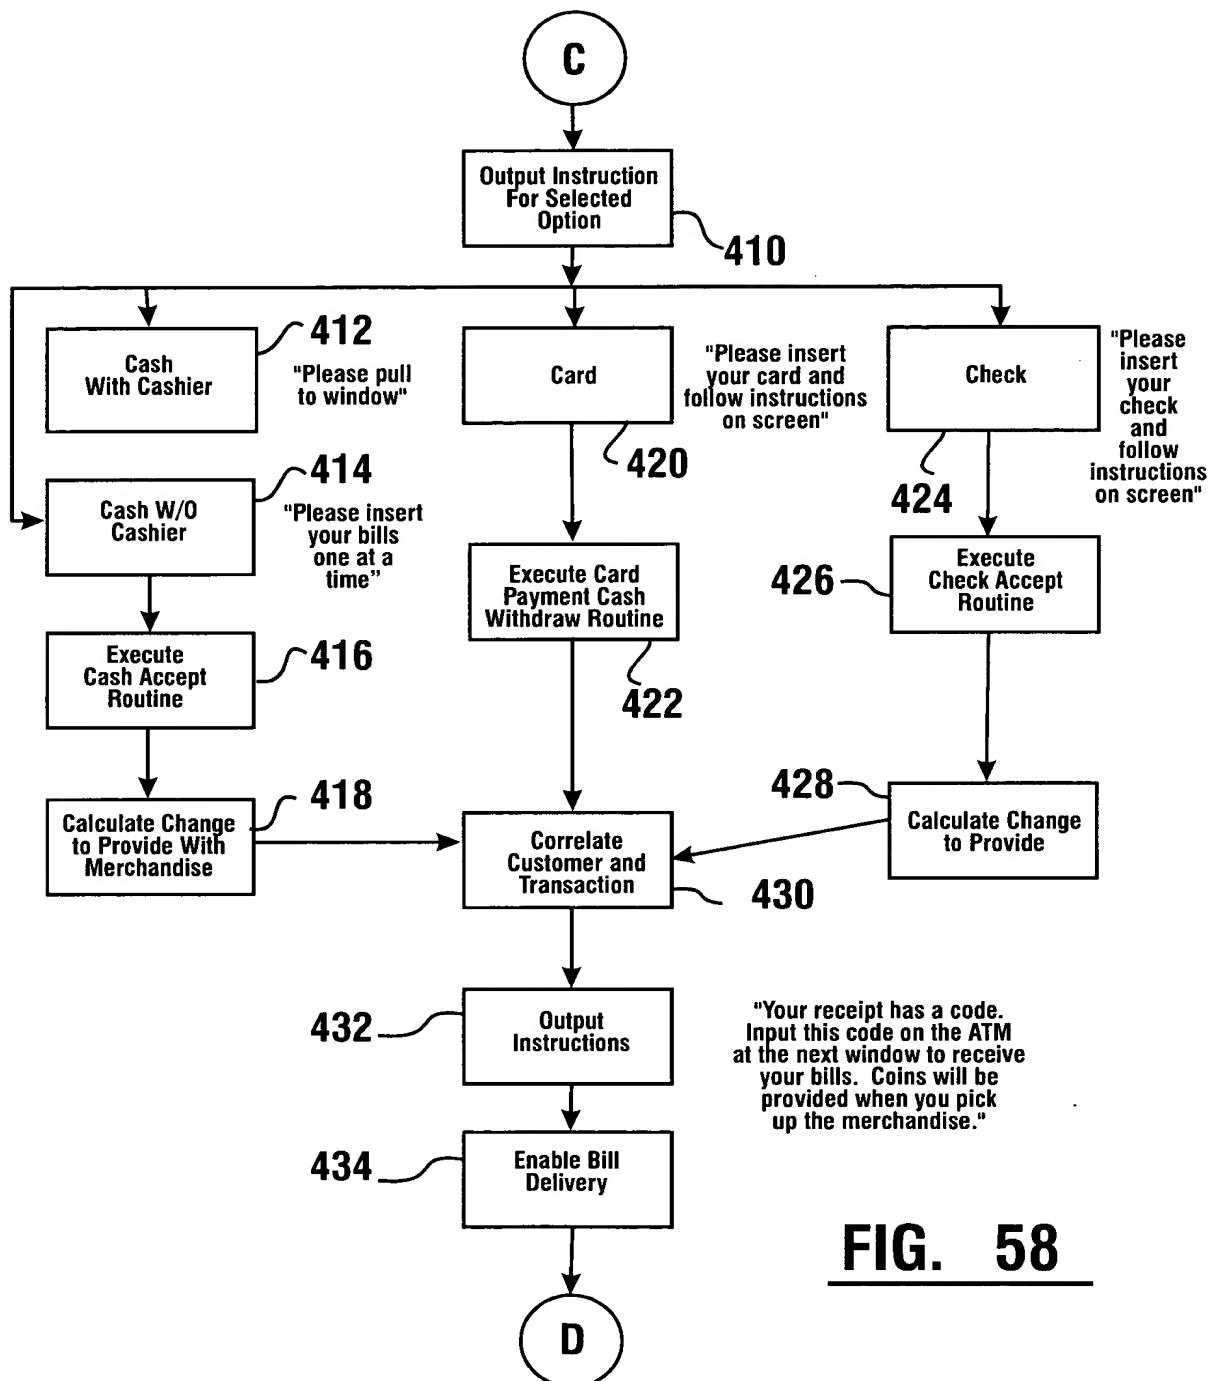


FIG. 58

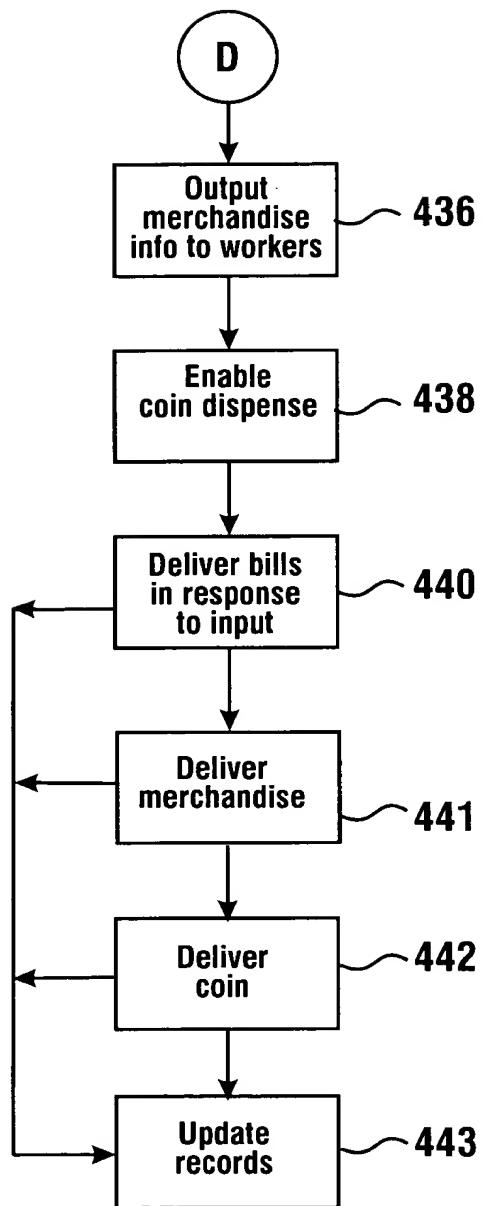


FIG. 59